

Rear Outer Handle

SECURITY AND LOCKS


12.Rear Outer Handle

A: REMOVAL


- 1) Raise the glass assembly - rear door to the top position.
- 2) Remove the trim panel - rear door. <Ref. to EI-73, REAR DOOR, REMOVAL, Door Trim.>
- 3) Remove the sealing cover - rear door.

CAUTION:


- Carefully remove the butyl tape. Excessive force will easily break the sealing cover - rear door.
- If the sealing cover - rear door gets broken, replace it with a new part.
 - (1) Remove the screw to remove the bracket - door trim rear.
 - (2) Disconnect connectors.
 - (3) Carefully remove the butyl tape to remove the sealing cover - rear door.

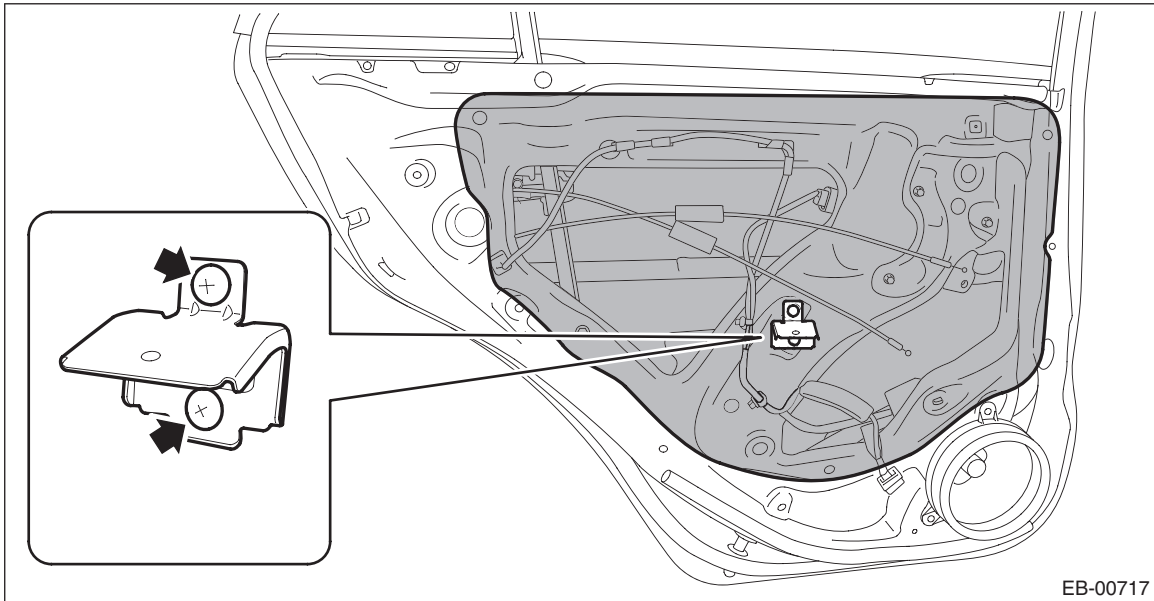

- 4) Remove the screws and move downward the latch & actuator assembly - rear.

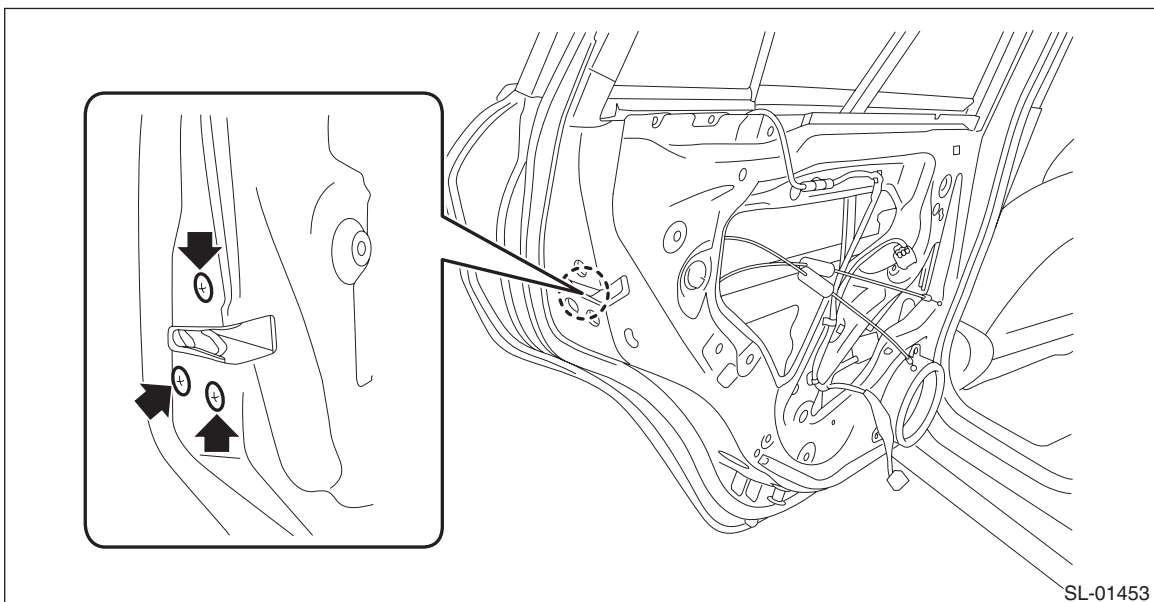

5) Remove the holder of the frame assembly - rear door outer.

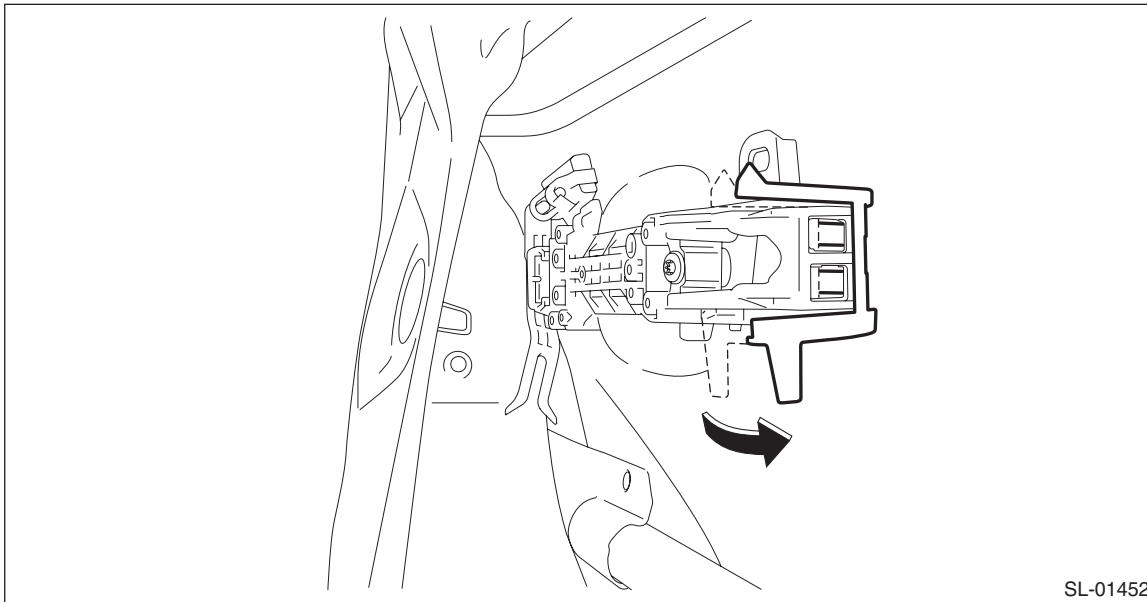


SL-01452

6) Remove the cover - handle rear outer.

PREPARATION TOOL:

TORX® T30

- (1) Loosen the TORX® bolt.
- (2) Release the claws, and then remove the cover - handle rear outer.

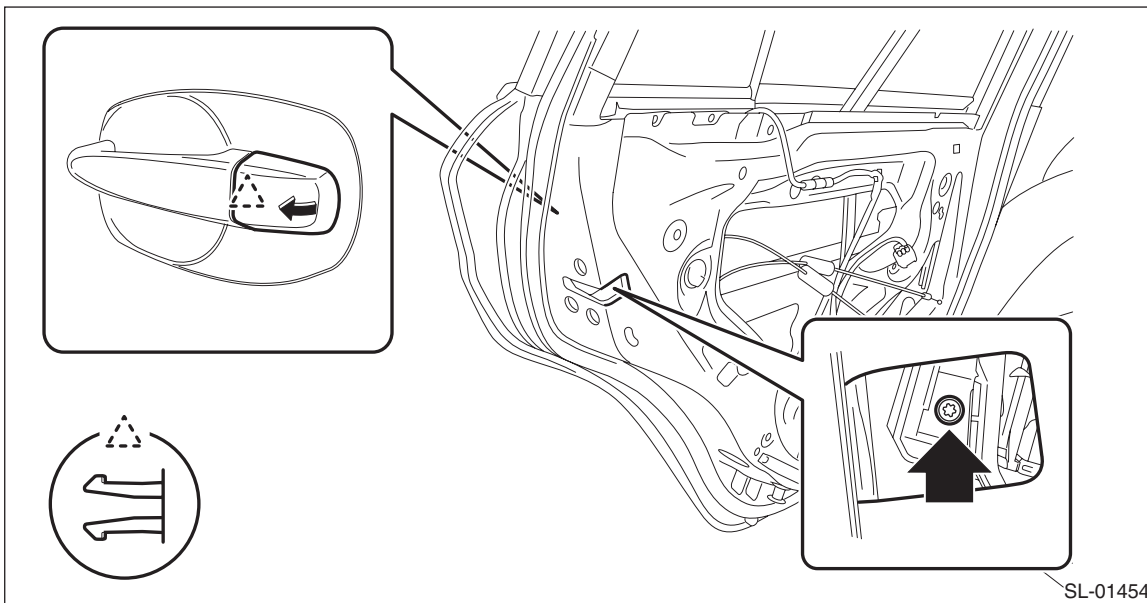

SL-01454


Rear Outer Handle

SECURITY AND LOCKS

7) Remove the handle - door outer by moving it rearward.

CAUTION:

Do not apply excessive force to remove the handle - door outer from the panel assembly - rear door. The panel assembly - rear door may be deformed.

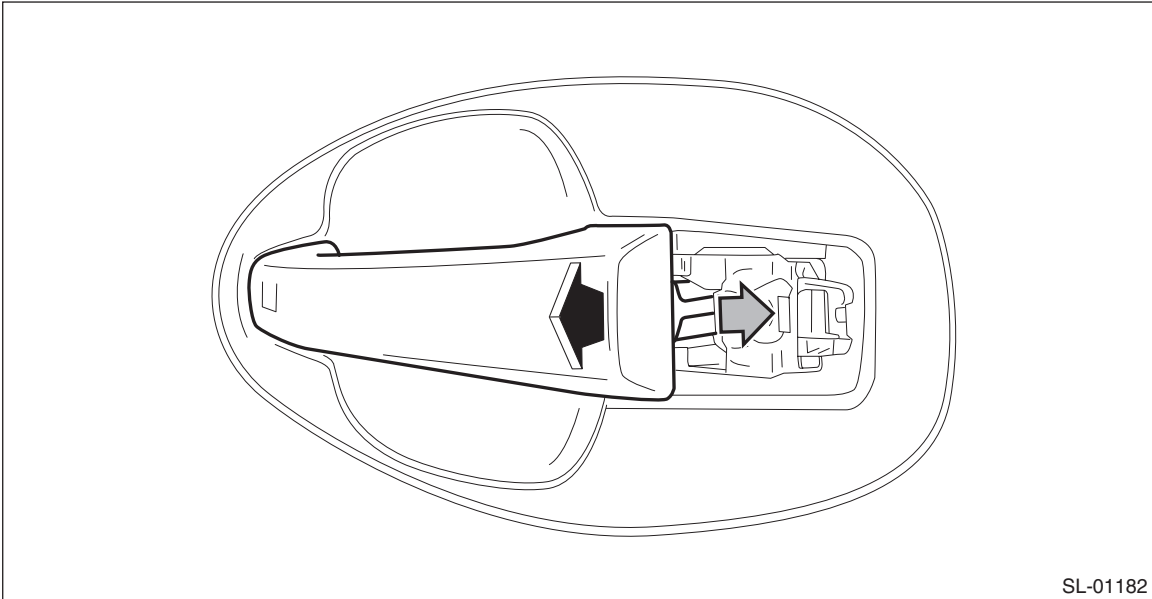


SL-01182

8) Remove the frame assembly - rear door outer.

PREPARATION TOOL:


TORX® T30

(1) Remove the spacer - door handle outer.

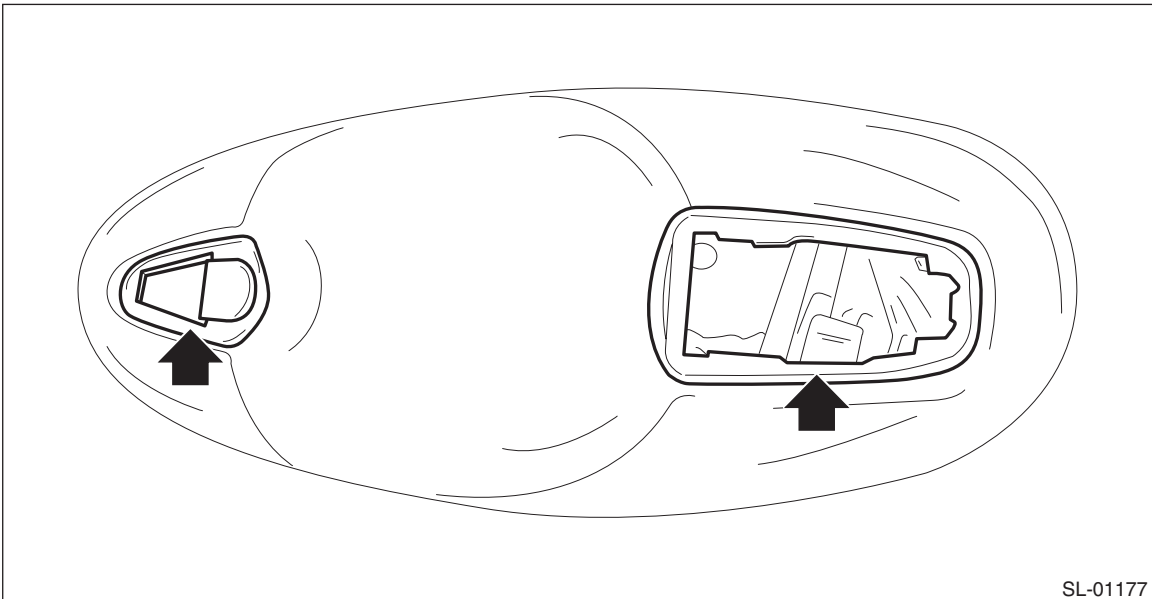

SL-01177

(2) Loosen the TORX® bolt and remove the frame assembly - rear door outer from inside the panel assembly - rear door.

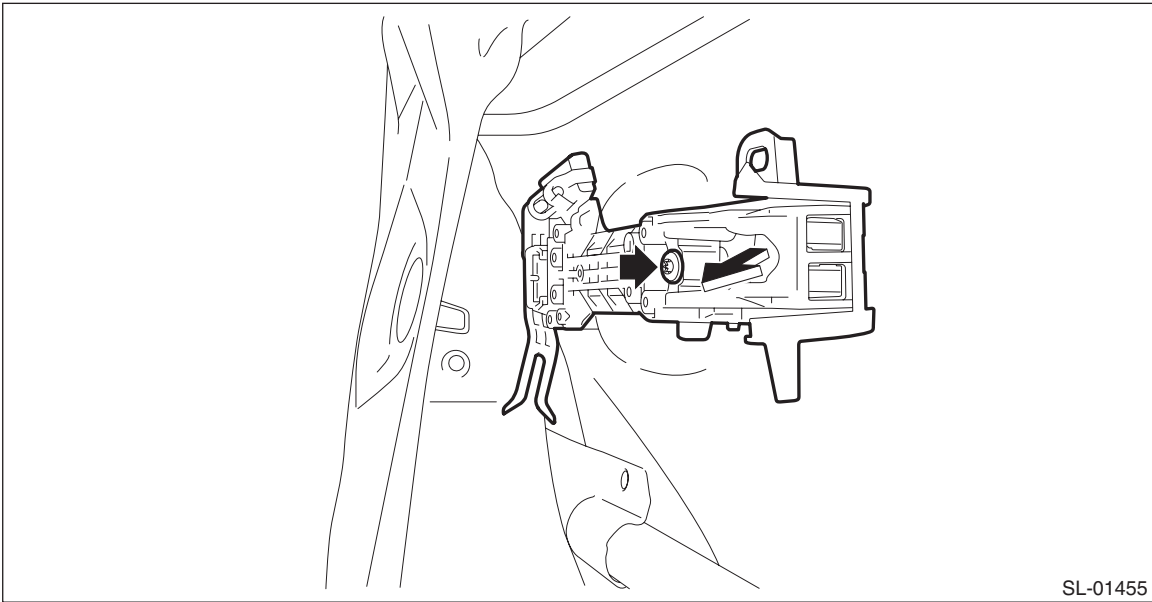

SL-01455

B: INSTALLATION

1) Before installation, check the following items.

- Lever is free from deformation.
- Grease is applied sufficiently to lever joints.

If grease is insufficient, add it as necessary before assembling.

- If the lever is faulty, replace the rear outer handle.
- If the lever is deformed, replace the latch & actuator assembly - rear.

2) Install each part in the reverse order of removal.

Tightening torque:

Refer to "COMPONENT" of "General Description". <Ref. to SL-2, DOOR LOCK ASSEMBLY, COMPONENT, General Description.>

C: INSPECTION

Check if the outer handle operates normally.

If the lever is faulty, replace the handle - door outer.