


23. Keyless Entry Control Module

A: REMOVAL

1. 4 DOOR MODEL

- 1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>
- 2) Remove the trim panel assembly - rear shelf. <Ref. to EI-120, REMOVAL, Rear Shelf Trim.>
- 3) Remove the keyless entry control module.
 - (1) Disconnect the connector.
 - (2) Remove the bolt and then remove the keyless entry control module.

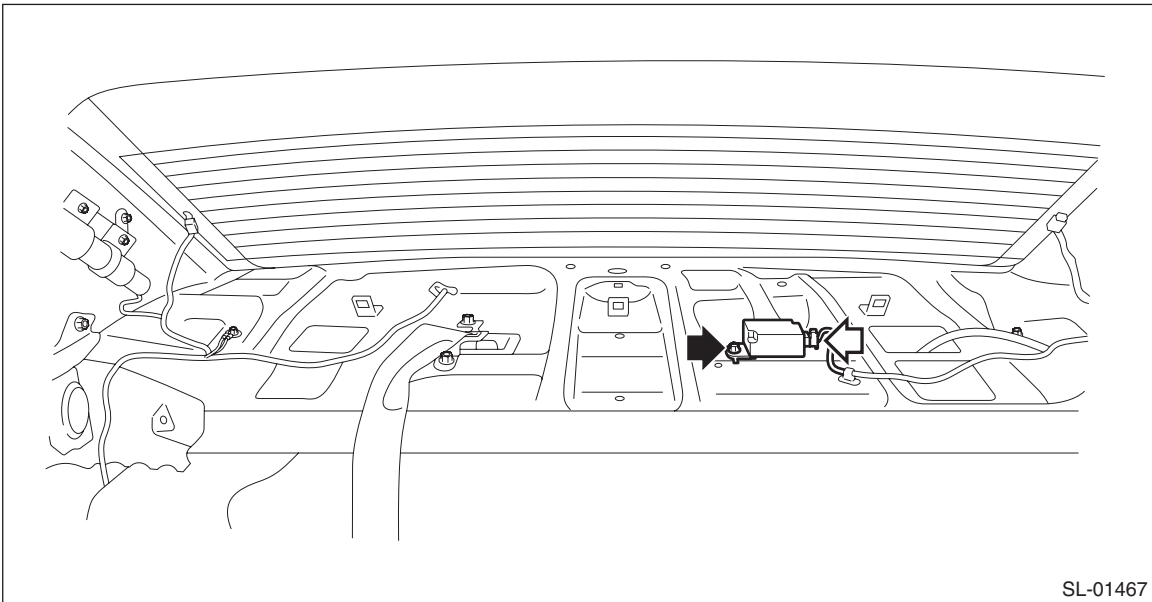

SL-01467

Keyless Entry Control Module

SECURITY AND LOCKS

2. 5 DOOR MODEL/XV MODEL

1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the trim panel - rear apron LH. <Ref. to EI-112, REMOVAL, Rear Quarter Trim.>

3) Remove the keyless entry control module.

(1) Disconnect the connector.

(2) Remove the bolt and then remove the keyless entry control module.

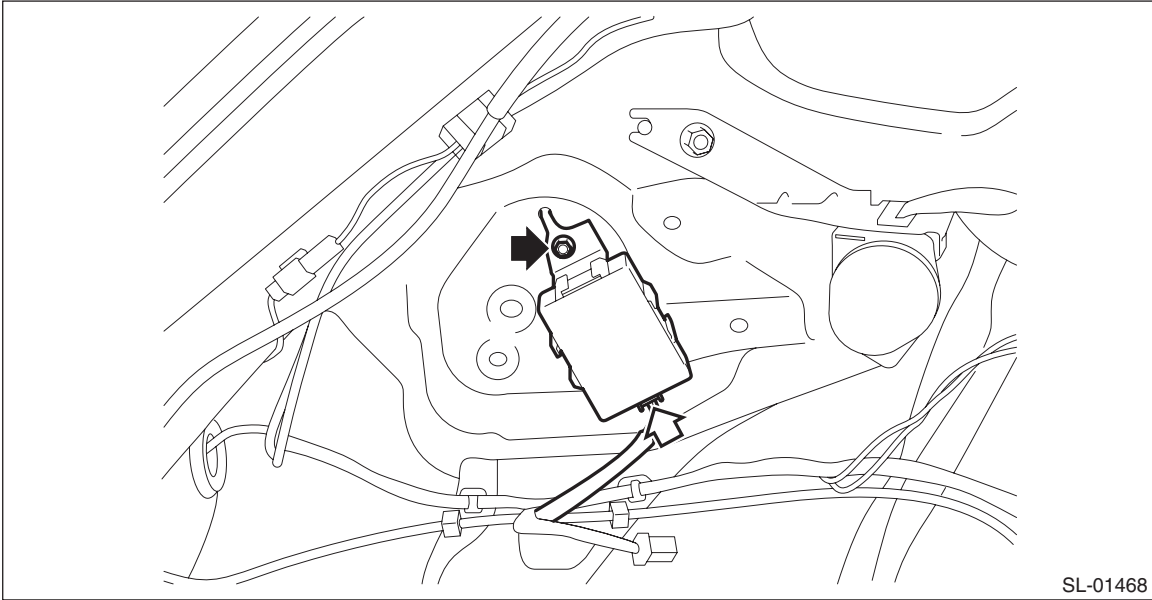

SL-01468

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Keyless entry control module: 13 N·m (1.33 kgf-m, 9.6 ft-lb)