

24. Keyless Buzzer

A: REMOVAL


1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:

For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Lift up the vehicle.

3) Remove the clips, and turn over the front side of the mud guard - front.

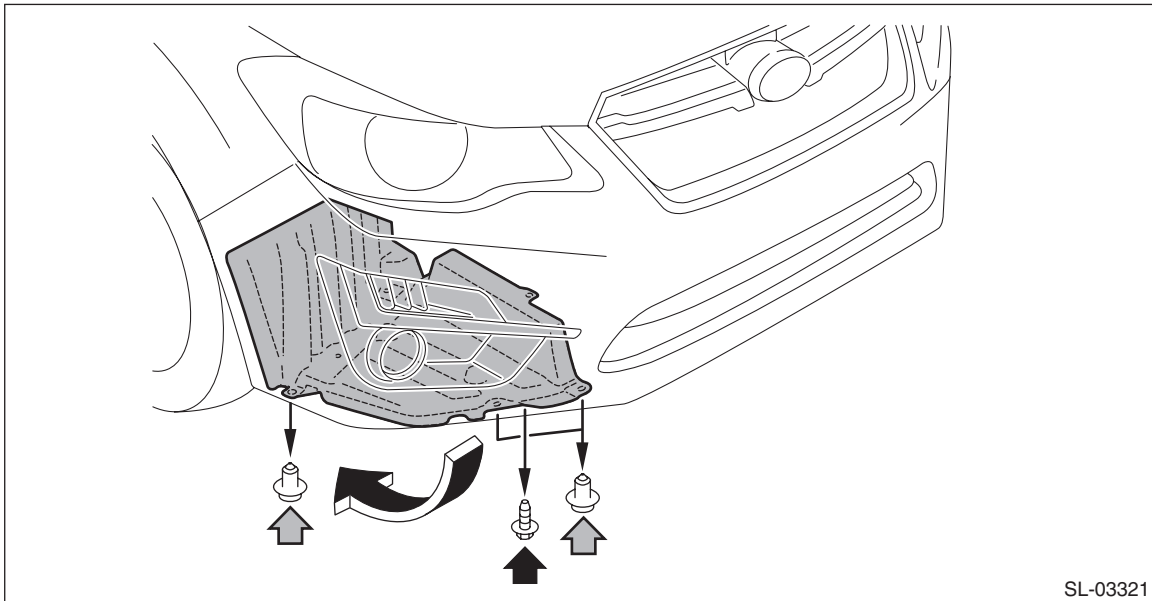

SL-03321

4) Remove the keyless buzzer.

(1) Disconnect the connector.

(2) Remove the clip and detach the keyless buzzer.

- Gasoline engine model




SL-03322

Keyless Buzzer

SECURITY AND LOCKS

- HEV model

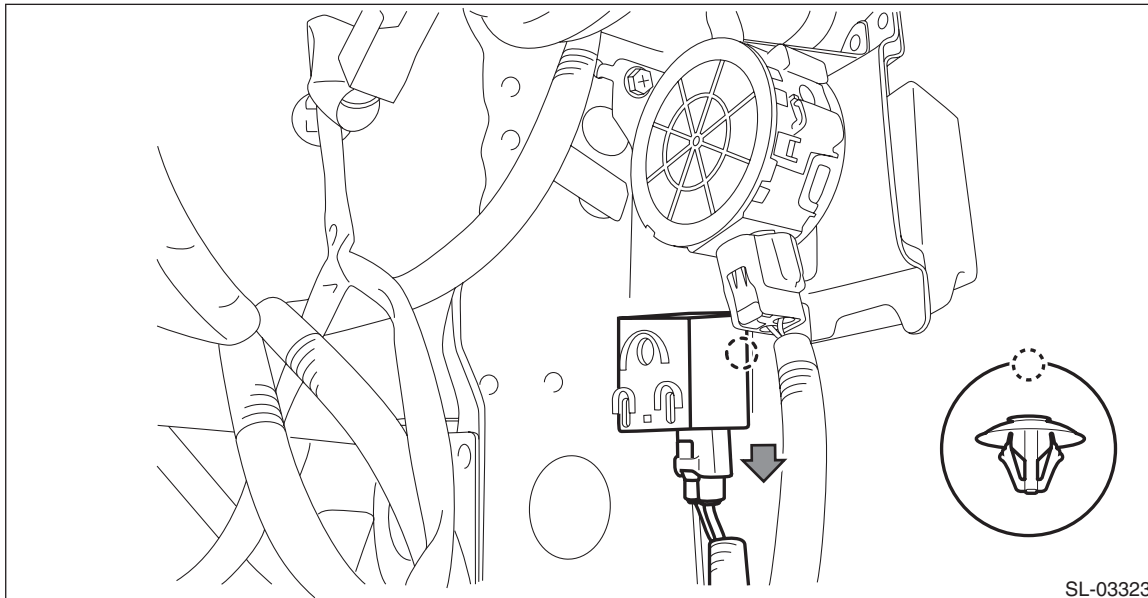


B: INSTALLATION

Install each part in the reverse order of removal.

CAUTION:

Install so that the front end of the under cover (b) comes inside the bumper face - front (a), and the front end of the mud guard (c) comes outside the bumper face - front (a).

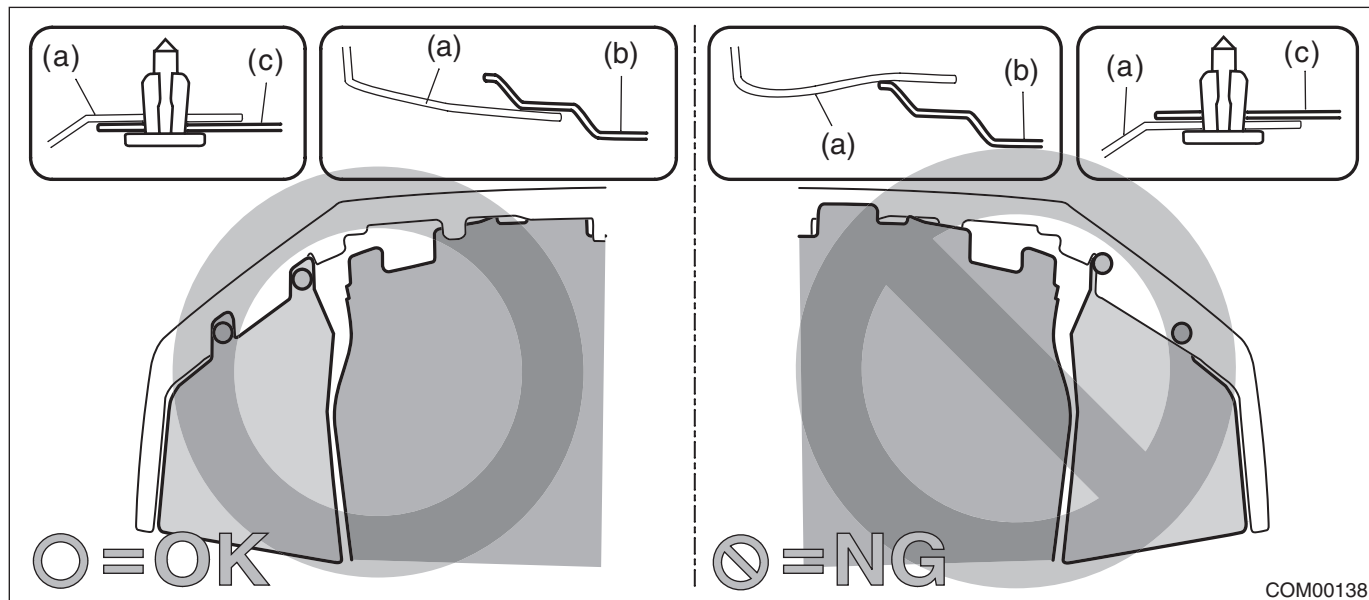

C: INSPECTION

Using the Subaru Select Monitor, perform forced operation of the keyless buzzer. <Ref. to BC(diag)-18, OPERATION, User Customizing.>

If the buzzer does not sound, replace the keyless buzzer.