

Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

7. Sunroof Switch

A: REMOVAL


1) Disconnect the ground cable from battery. <Ref. to NT-5, BATTERY, NOTE, Note.>

NOTE:


For the 12 volt engine restart battery of HEV model, disconnect the ground terminal from 12V engine restart battery sensor.

2) Remove the light assembly - map.

(1) Remove the lens and detach the screws.

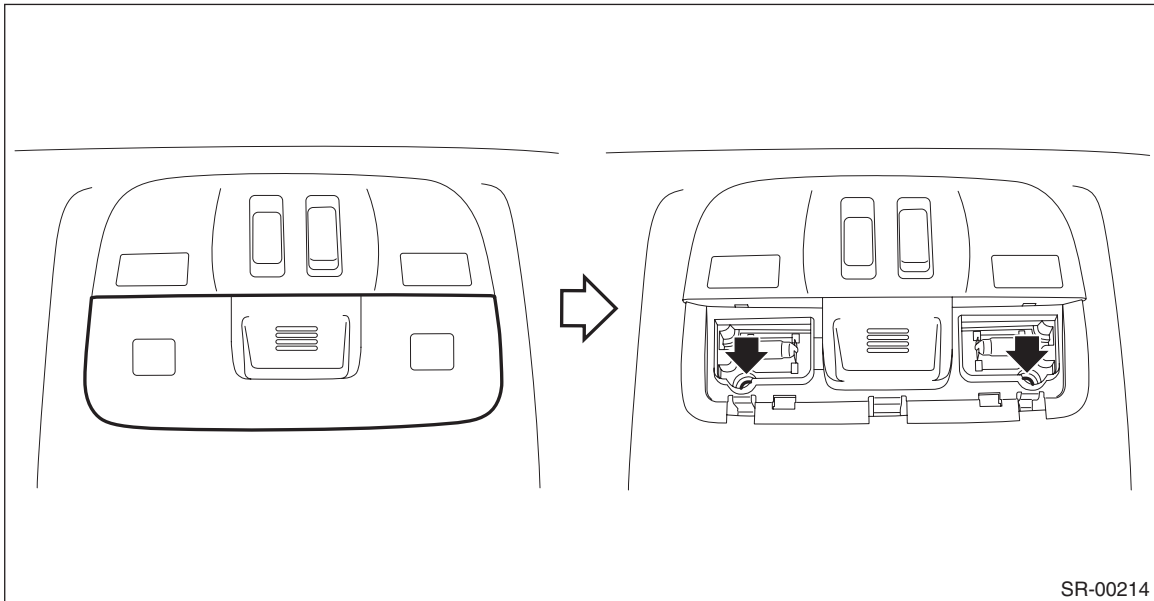


(2) Release the clips and pull out the light assembly - map to disconnect the connectors.

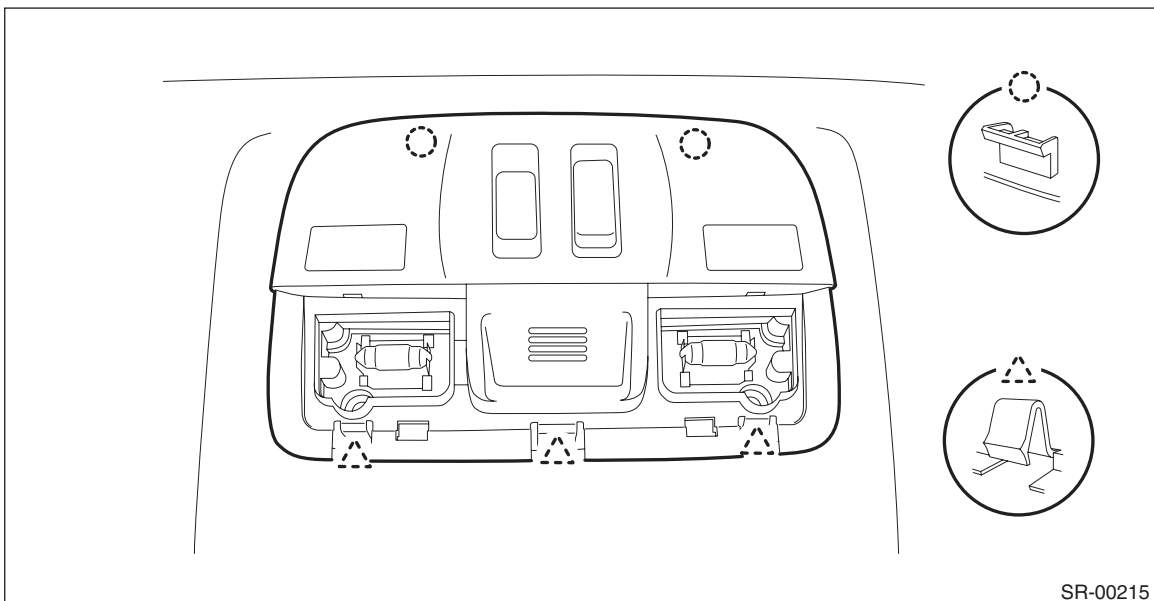

Sunroof Switch

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

3) Release the claws and remove the sunroof switch from the light assembly - map.

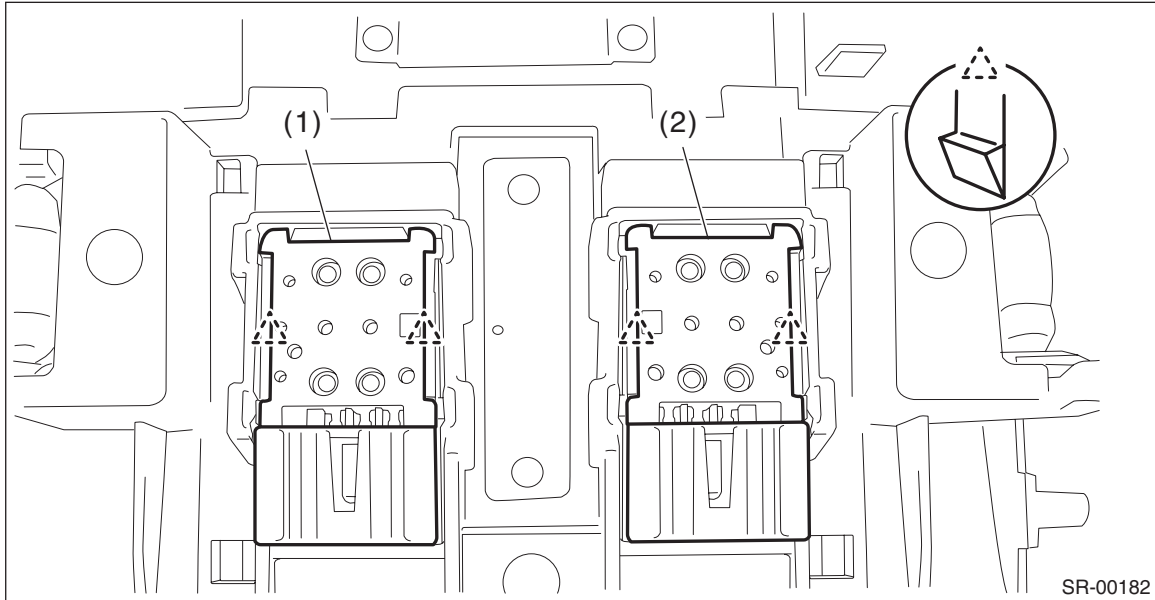

(1) Sunroof switch (tilt)

(2) Sunroof switch (slide)

B: INSTALLATION

Install each part in the reverse order of removal.

Sunroof Switch


SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

C: INSPECTION

- 1) Remove the light assembly - map.
- 2) Disconnect the harness connector of sunroof switch.
- 3) Check the resistance between sunroof switch terminals.

PREPARATION TOOL:

Circuit tester

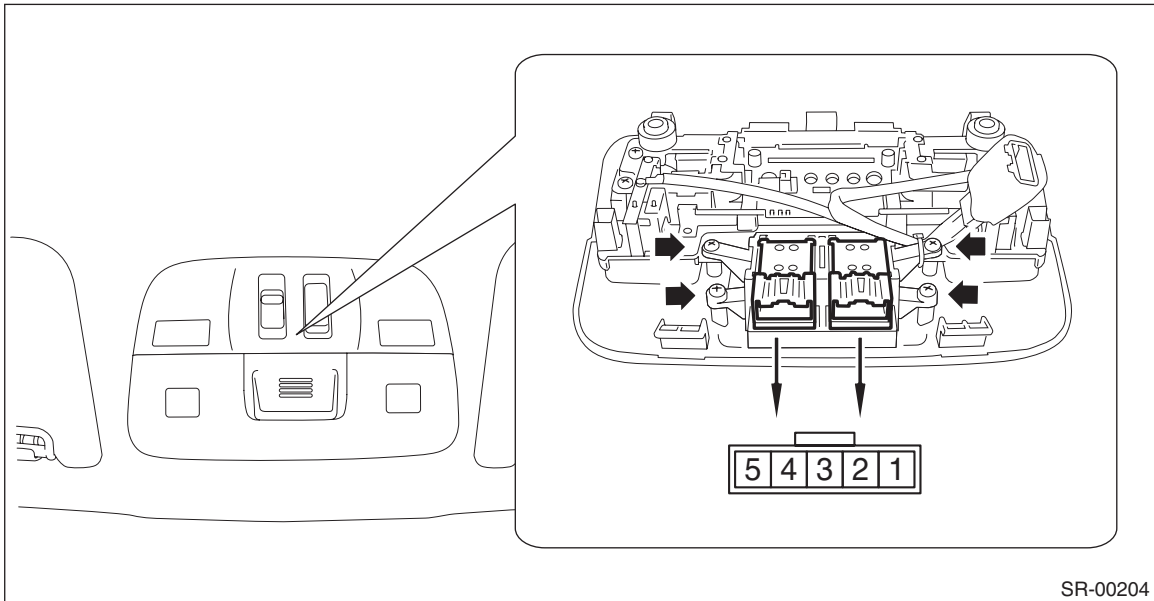

Terminal No.	Inspection conditions	Standard	Connector No.
1 — 3	Open	Less than 1 Ω	R128
4 — 3	Close	Less than 1 Ω	
1 — 3	Tilt up	Less than 1 Ω	R187
4 — 3	Tilt down	Less than 1 Ω	

- 4) Replace the sunroof switch if the inspection result is not within the standard.