

Center Exhaust Pipe

EXHAUST


3. Center Exhaust Pipe

A: REMOVAL


CAUTION:

Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.


- 1) Turn the ignition switch to OFF.
- 2) Lift up the vehicle.
- 3) Remove the bolts, springs, and nuts securing the rear exhaust pipe to the center exhaust pipe.

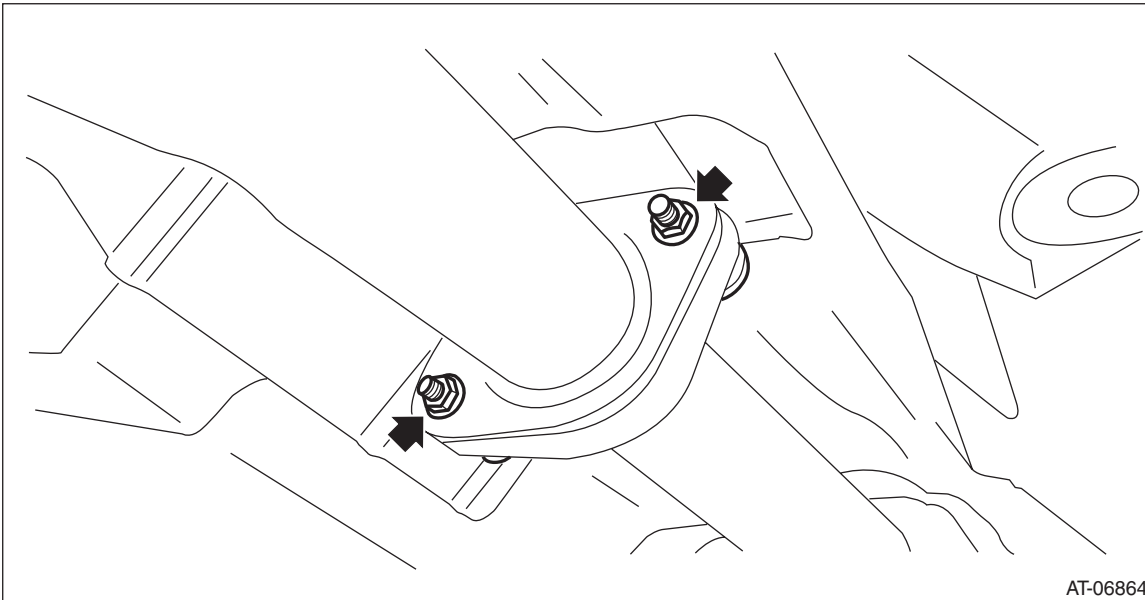

- 4) Remove the bolt which holds center exhaust pipe to hanger bracket.

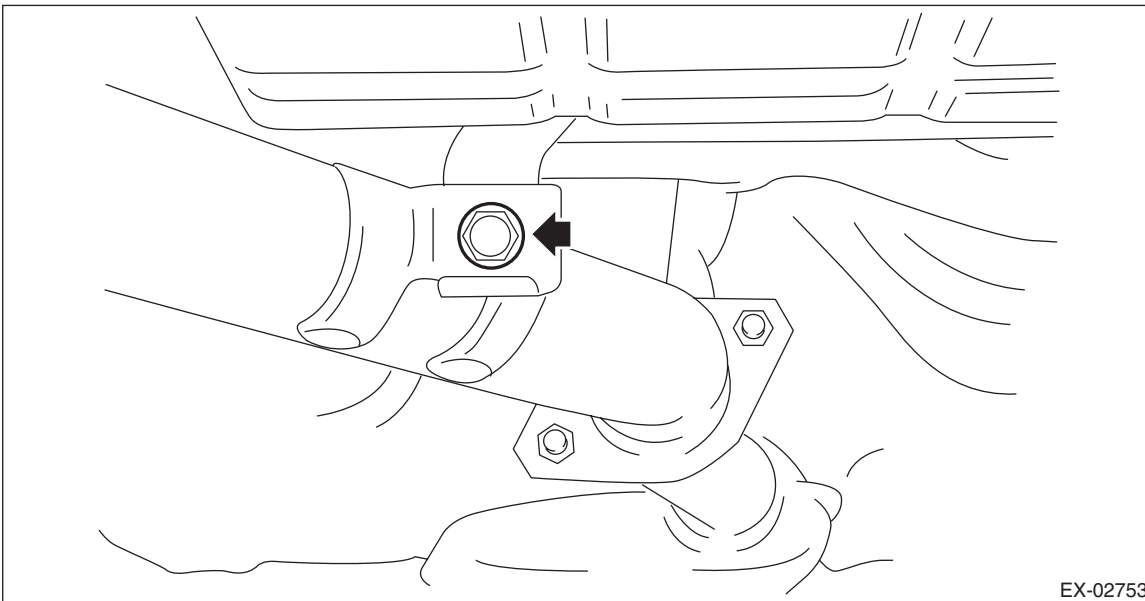

- 5) Remove the center exhaust pipe from the front exhaust pipe.

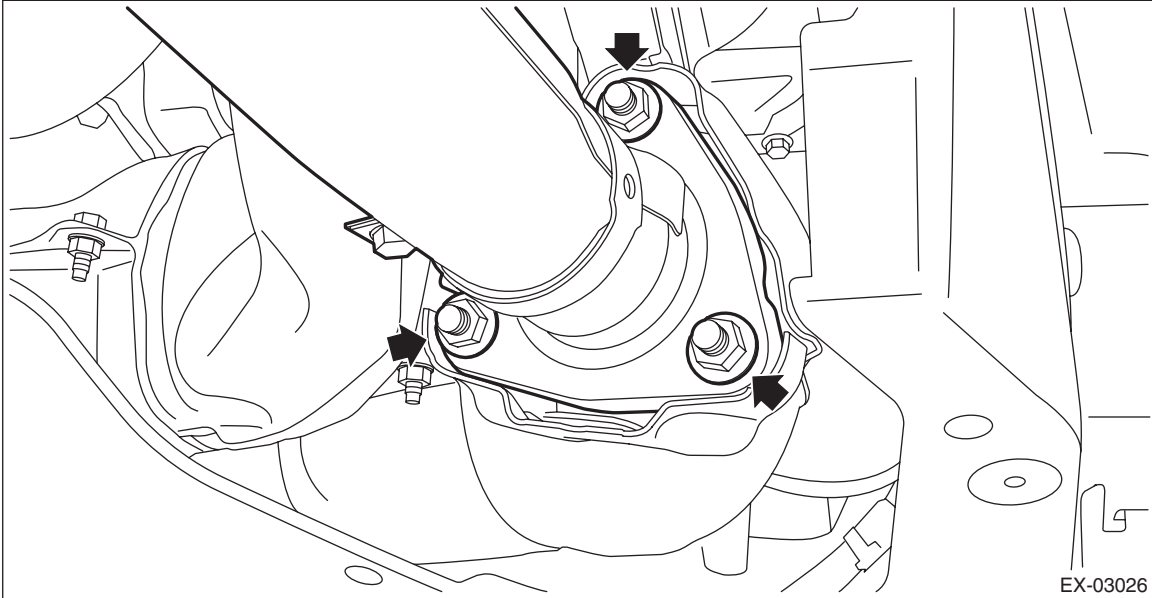

- 6) Remove the center exhaust pipe upper cover from the center exhaust pipe.

B: INSTALLATION

- 1) Install the center exhaust pipe upper cover to the center exhaust pipe.


Tightening torque:

13 N·m (1.3 kgf-m, 9.6 ft-lb)

- 2) Temporarily tighten the nuts which secure the center exhaust pipe to the front exhaust pipe.

NOTE:

Use a new gasket.

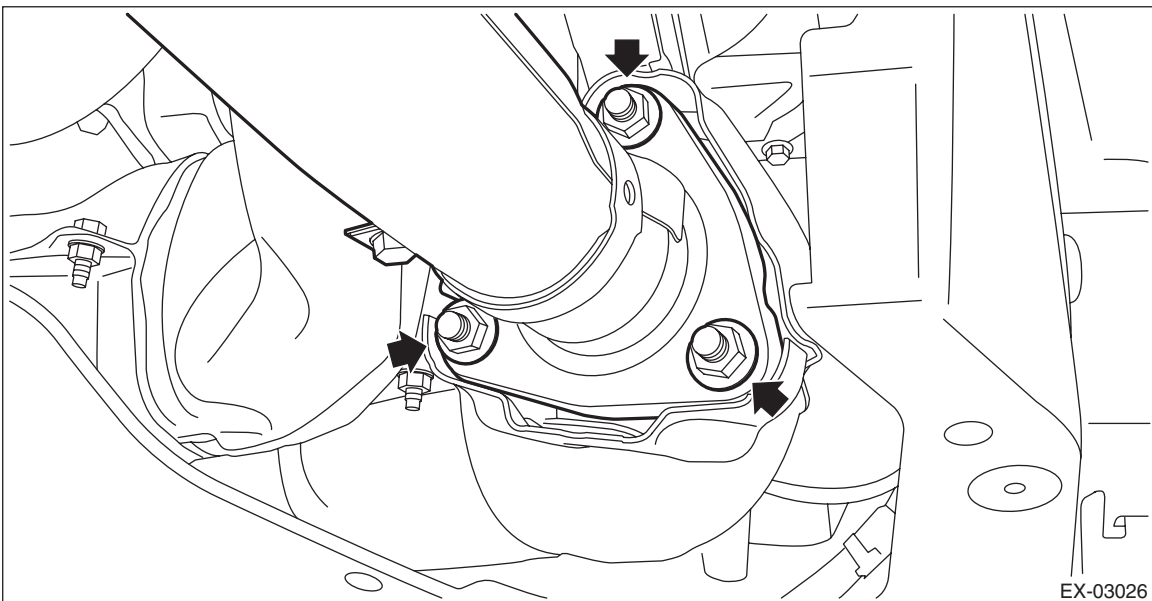

Center Exhaust Pipe

EXHAUST


3) Install the bolts, springs, and nuts which secure the rear exhaust pipe to the center exhaust pipe.

NOTE:

Use a new gasket.

Tightening torque:


18 N·m (1.8 kgf-m, 13.3 ft-lb)

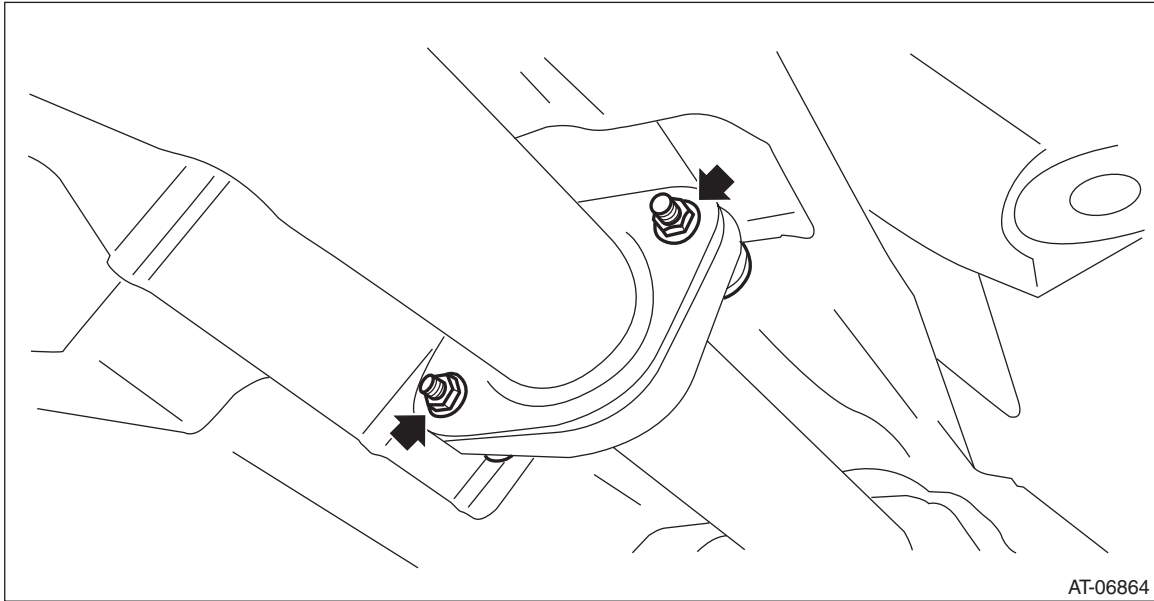

4) Tighten the bolts which secure the center exhaust pipe to the hanger bracket.

Tightening torque:


35 N·m (3.6 kgf-m, 25.8 ft-lb)

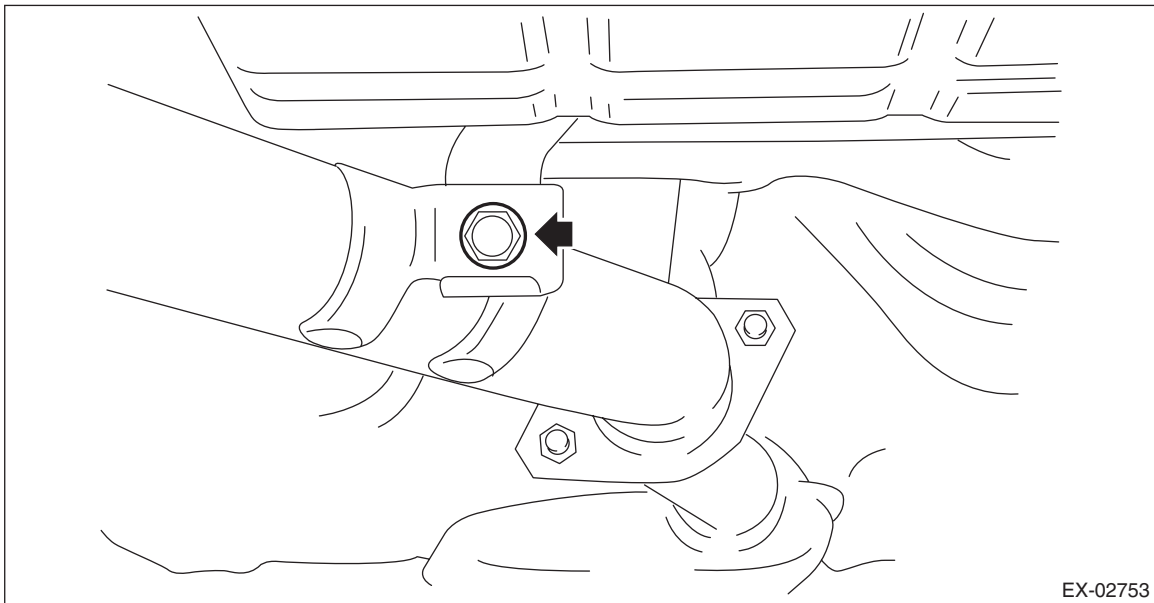

5) Tighten the nuts which secure the center exhaust pipe to the front exhaust pipe.

Tightening torque:

42.5 N·m (4.3 kgf-m, 31.3 ft-lb)

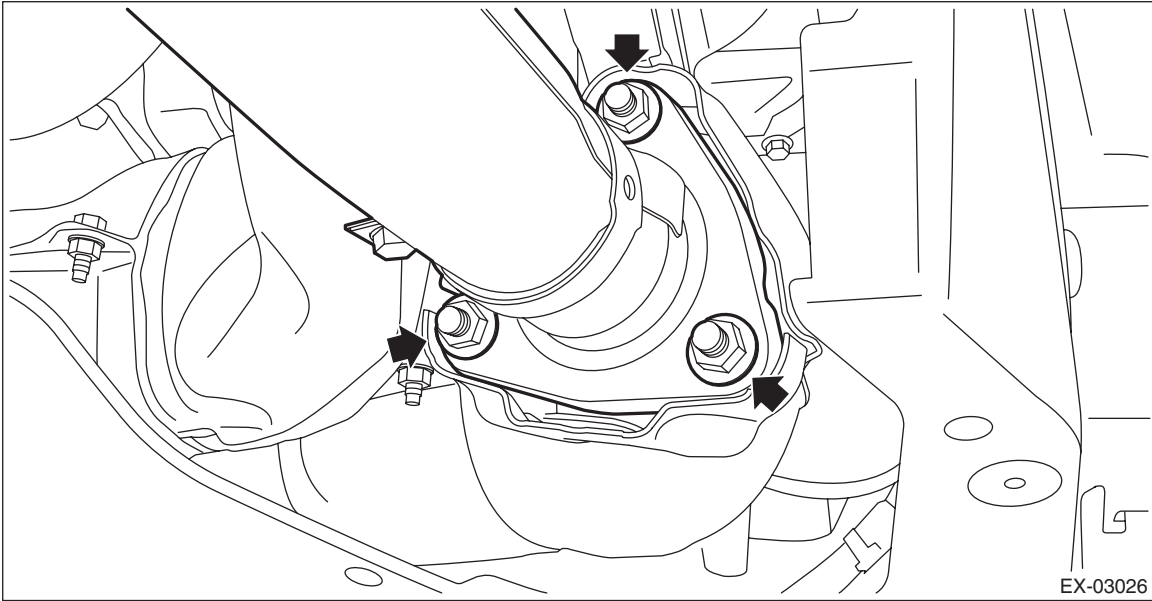

C: INSPECTION

- 1) Check the connections and welded parts for exhaust leaks.
- 2) Make sure there are no holes or rusting.