

41.CVTF Filter

A: REMOVAL

NOTE:

- Although CVTF filter is a maintenance-free part, replace it if a large quantity of wear debris and metal particles are found in CVTF and CVTF filter.
- For removal of CVTF filter, refer to “Transmission Case”. <Ref. to CVT(TH58A)-245, REMOVAL, Transmission Case.> <Ref. to CVT(TH58A)-251, DISASSEMBLY, Transmission Case.>

B: INSTALLATION

NOTE:

For installation of CVTF filter, refer to “Transmission Case”. <Ref. to CVT(TH58A)-254, ASSEMBLY, Transmission Case.> <Ref. to CVT(TH58A)-248, INSTALLATION, Transmission Case.>

C: INSPECTION

- Check if a large quantity of wear debris or metal particles are in CVTF and CVTF filter.
- Check for broken part or damaged O-ring.