

64. Door Cord

A: LOCATION


Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
D1	8	Black	C-2	B30	Bulkhead wiring harness
D2	2	★	C-4		Front door speaker LH
D3	6	Dark gray	C-4		Front power window motor LH
D5	10	★	B-3		Outer mirror assembly LH
D7	16	★	B-4		Power window main switch
D11	8	Black	C-3	B101	Bulkhead wiring harness
D12	2	★	B-2		Front door speaker RH
D13	6	Dark gray	B-3		Front power window motor RH
D15	10	★	B-2		Outer mirror assembly RH
D17	8	★	B-2		Front power window sub-switch
D18	10	★	B-3		Front door lock actuator RH
D22	8	★	B-4	R10	Rear wiring harness LH
D23	2	★	C-4		Rear door speaker LH
D24	6	Dark gray	B-5		Rear power window motor LH
D25	8	★	B-5		Rear power window sub-switch LH
D26	10	★	B-5		Rear door lock actuator LH
D28	8	★	B-3	R13	Rear wiring harness RH
D29	2	★	B-3		Rear door speaker RH
D30	6	Dark gray	B-3		Rear power window motor RH
D31	8	★	B-3		Rear power window sub-switch RH
D32	10	★	A-3		Rear door lock actuator RH
D56	6	★	B-3		Outer handle RH
D66	6	★	B-4		Outer handle LH
D72	10	★	B-4		Front door lock actuator LH
D83	28	★	B-1	i76	Instrument panel wiring harness
D84	28	★	C-3	i101	
D102	3	★	B-4		Power window main switch
D125	5	★	B-2		Passenger's seat door lock switch
D149	16	★	B-4		Remote control mirror switch

★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB58	2	Yellow	C-4		Front door impact sensor LH
AB62	2	Yellow	C-3	R123	Rear wiring harness LH
AB63	2	Yellow	C-1	R124	Rear wiring harness RH
AB64	2	Yellow	B-3		Front door impact sensor RH

Door Cord

WIRING SYSTEM

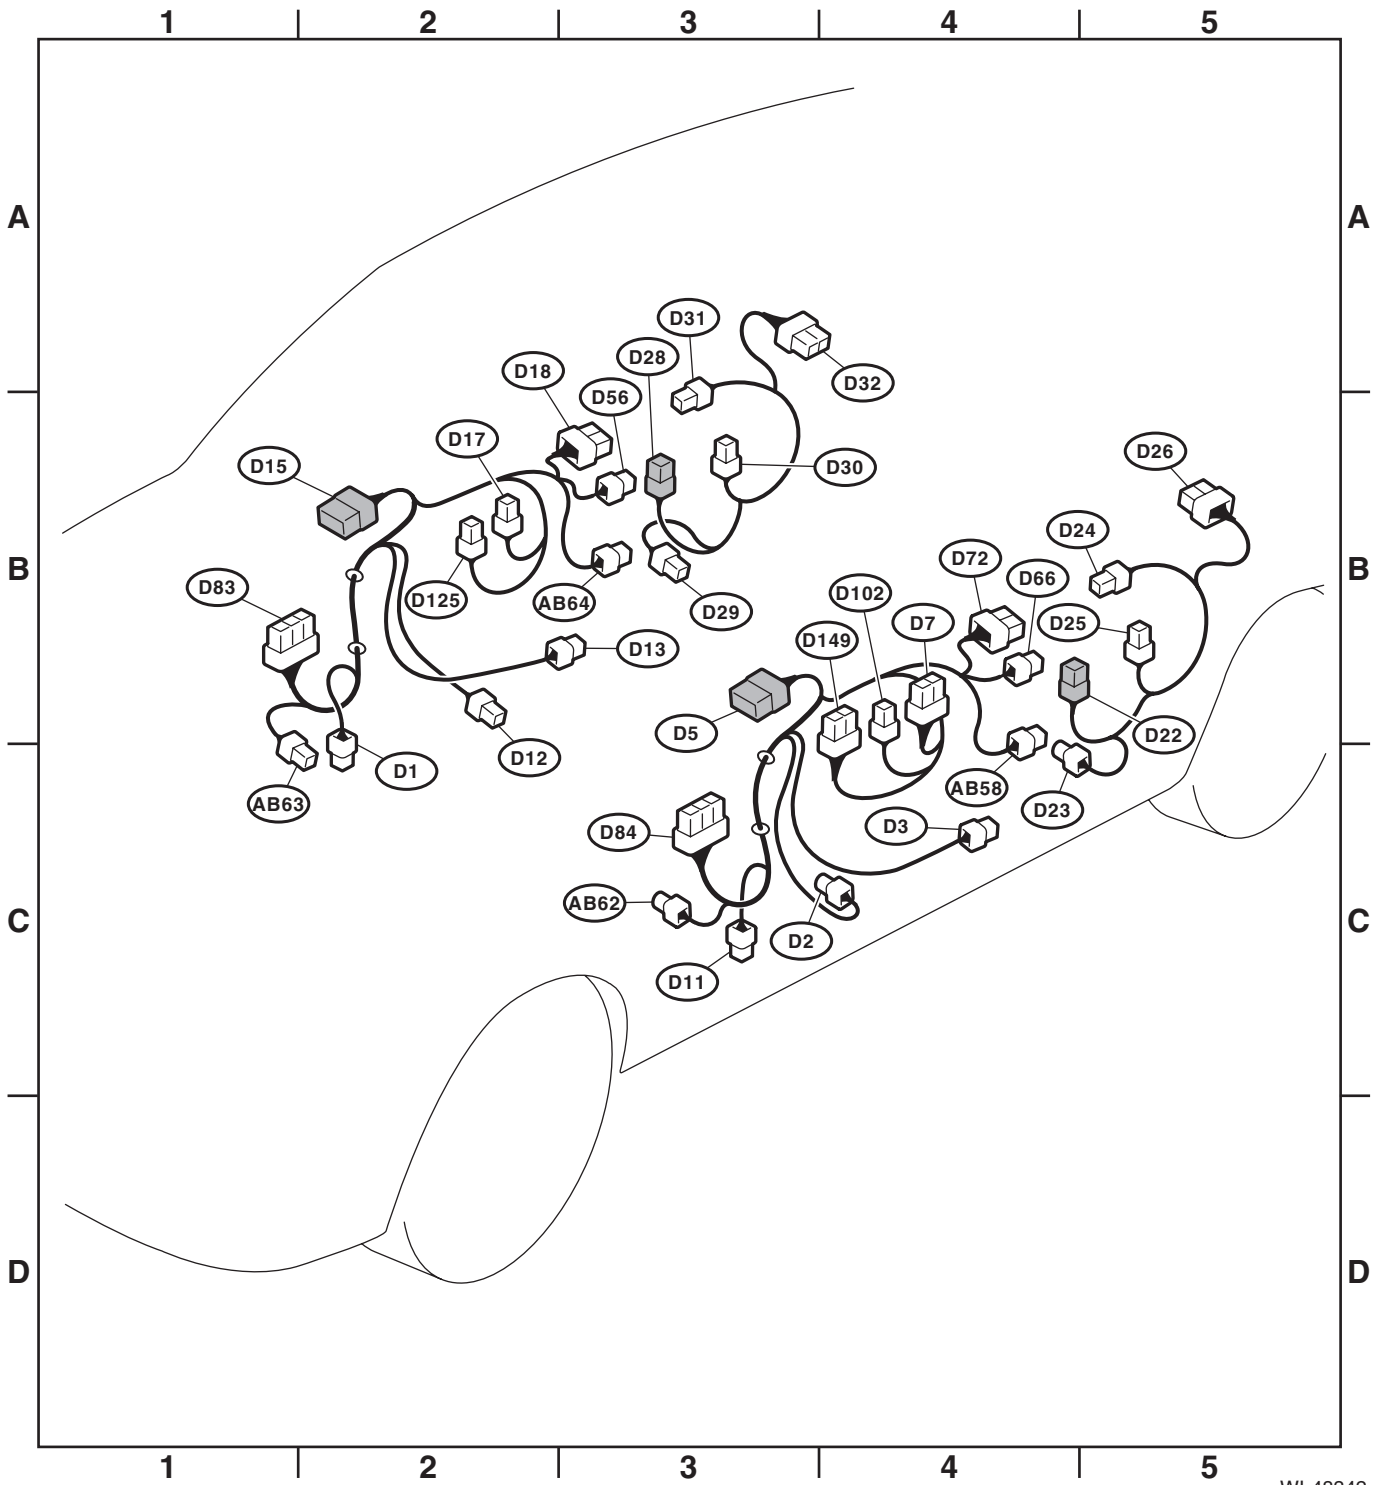

WI-48342