

AIR CONDITIONING SYSTEM

| | Page |
|---|-------|
| PRECAUTIONS | AC-2 |
| TROUBLESHOOTING | AC-2 |
| Checking of Refrigeration System with Manifold Gauge | AC-4 |
| SPECIAL TOOLS AND TEST EQUIPMENT | AC-8 |
| AIR CONDITIONING SYSTEM CIRCUIT | AC-9 |
| ON-VEHICLE INSPECTION | AC-10 |
| REFRIGERATION SYSTEM | AC-11 |
| Checking of Refrigerant Charge | AC-11 |
| Installation of Manifold Gauge Set | AC-11 |
| Discharging of Refrigeration System | AC-12 |
| Evacuating and Charging of Refrigeration System | AC-12 |
| FUNCTIONAL TEST AND ADJUSTMENT | AC-16 |
| Vacuum Circuit | AC-16 |
| Power Servo Unit Operation | AC-17 |
| Automatic Temperature Control | AC-18 |
| Air Mix Damper Linkage | AC-19 |
| Sensor Circuit | AC-19 |
| Double Vacuum Valve (DVV) | AC-20 |
| Water Temperature Switch | AC-20 |
| Condenser Motor | AC-21 |
| SYSTEM COMPONENTS | AC-22 |
| COMPRESSOR | AC-23 |
| CONDENSER | AC-36 |
| RECEIVER | AC-37 |
| COOLING UNIT | AC-37 |
| Evaporator | AC-39 |
| REFRIGERANT LINES | AC-40 |
| EXPANSION VALVE | AC-41 |
| VACUUM SWITCHING VALVE (VSV) | AC-42 |

PRECAUTIONS

1. When handling refrigerant (R-12), the following precautions should be observed:
 - (a) Always wear eye protection.
 - (b) Keep the refrigerant container (service drum) below 40°C (104°F).
 - (c) Do not handle refrigerant in an enclosed area where there is an open flame.
 - (d) Discharge refrigerant slowly when purging the system.
 - (e) Be careful that the liquid refrigerant does not get on your skin.
2. If liquid refrigerant gets in the eyes or on the skin:
 - (a) Do not rub the eye or skin.
 - (b) Wash the area with a lot of cool water.
 - (c) Apply clean petroleum jelly to the skin.
 - (d) Rush to a physician or hospital for immediate professional treatment.
 - (e) Do not attempt to treat yourself.
3. When tubing:
 - (a) Apply a few drops of compressor oil to the seats of the O-ring fittings.
 - (b) Tighten the nut using two wrenches to avoid twisting the tube.
 - (c) Tighten the O-ring fitting to the specified torque.

Tightening torque for O-ring fittings

| Fitting size | Torque |
|---------------|------------------------------|
| 0.31 in. Tube | 135 kg-cm (10 ft-lb, 13 N·m) |
| 0.50 in. Tube | 225 kg-cm (16 ft-lb, 22 N·m) |
| 0.62 in. Tube | 325 kg-cm (24 ft-lb, 32 N·m) |

TROUBLESHOOTING

| Symptom | Possible causes | Checks and corrections | Page |
|---------------------|---|-------------------------|-------|
| No blower operation | Blown circuit breaker | Replace | AC-9 |
| | Defective blower motor | Check and repair | AC-9 |
| | Defective heater relay | Check operation | AC-9 |
| | Defective A/C cut-off relay | Check operation | AC-9 |
| | Defective blower switch | Check for short or open | AC-9 |
| | Defective wiring connection | Check and repair | AC-9 |
| No blower control | Blown blower resistor | Replace | AC-9 |
| | Defective blower switch | Check for short or open | AC-9 |
| | Defective temperature sensors (in-car sensor, ambient sensor) | Check for short or open | AC-19 |
| | Defective rheostat | Check for short or open | AC-9 |
| | Defective power servo unit | Check operation | AC-17 |
| | Defective DVV | Check operation | AC-20 |
| | Defective amplifier | Check operation | |

TROUBLESHOOTING (Cont'd)

| Symptom | Possible causes | Checks and corrections | Page |
|-------------------------------------|---|--------------------------------------|-------|
| No blower control | Defective water temperature relay | Check for open | AC-9 |
| | Defective heat mode switch | Check for short | AC-9 |
| | Defective water temperature switch | Check for short | AC-20 |
| | Defective Hi-speed relay | Check for short | AC-9 |
| | Defective wiring connection | Check and repair | AC-9 |
| | Defective vacuum circuit | Check for leak and repair | AC-16 |
| Interior temperature does not lower | Blown fuse or circuit breaker | Replace | AC-9 |
| | Defective magnetic clutch | Check and repair | AC-23 |
| | Defective compressor | Check and repair | AC-23 |
| | Defective pressure switch | Replace | AC-9 |
| | Defective expansion valve | Replace | AC-4 |
| | Defective EPR | Replace | AC-4 |
| | Insufficient refrigerant in system | Check discharge refrigeration system | AC-11 |
| | Defective A/C switch | Check for short or open | AC-9 |
| | Defective temperature sensors (in-car sensor, ambient sensor) | Check for short | AC-19 |
| | Defective rheostat | Check for short | AC-9 |
| | Defective power servo unit | Check operation | AC-17 |
| | Defective DVV | Check operation | AC-20 |
| | Defective amplifier | Check operation | |
| | Defective condenser motor | Check operation | AC-21 |
| | Defective A/C relay | Check operation | AC-9 |
| | Defective wiring connection | Check and repair | AC-9 |
| | Defective vacuum circuit | Check for leak and repair | AC-16 |
| Interior temperature does not rise | Defective water valve | Check operation | |
| | Defective temperature sensors (in-car sensor, ambient sensor) | Check for open | AC-19 |
| | Defective rheostat | Check for open | AC-9 |
| | Defective power servo unit | Check operation | AC-17 |
| | Defective DVV | Check operation | AC-20 |
| | Defective amplifier | Check operation | |
| | Defective wiring connection | Check and repair | AC-9 |
| | Defective vacuum circuit | Check for leak and repair | AC-16 |
| Unstable operation (hunting) | Defective vacuum circuit | Check for leak and repair | AC-16 |
| | Poor connection of rheostat | Check and repair | AC-9 |
| | Defective power servo unit | Check operation | AC-17 |
| | Defective DVV | Check operation | AC-20 |
| | Defective amplifier | Check operation | |
| | Poor connection in wire | Check and repair | AC-9 |
| Improper shifting of dampers | Misadjusted control lever or rod | Check and repair | |
| | Disconnected control wire | Check and repair | AC-9 |
| | Defective dampers | Check and repair | AC-19 |

Checking of Refrigeration System with Manifold Gauge

This is a method in which the trouble is located by using manifold gauge.

Read the manifold gauge pressure with the following established conditions:

- Temperature at the air inlet is 30 – 35°C (86 – 95°F)
- Engine running at 2,000 rpm
- Blower speed set at high
- A/C switch ON
- Temperature control lever set at cool

NOTE: It should be noted that the gauge indications may vary slightly due to ambient temperature conditions.

1. NORMALLY FUNCTIONING REFRIGERATION SYSTEM



Gauge reading:

Low pressure side 1.5 – 2.0 kg/cm²
(21 – 28 psi, 147 – 196 kPa)


High pressure side 14.5 – 15.0 kg/cm²
(206 – 213 psi, 1,422 – 1,471 kPa)

2. MOISTURE PRESENT IN REFRIGERATION SYSTEM

Condition: Periodically cools and then fails to cool

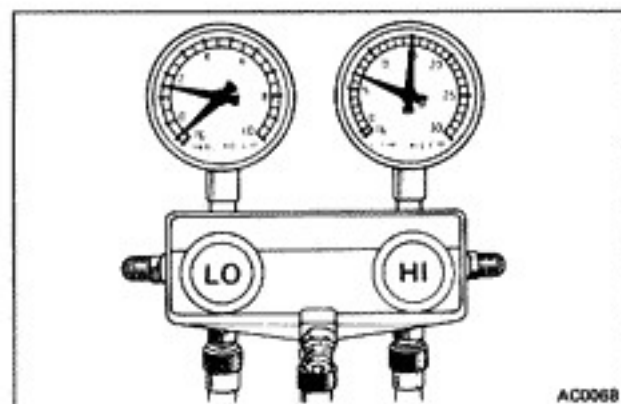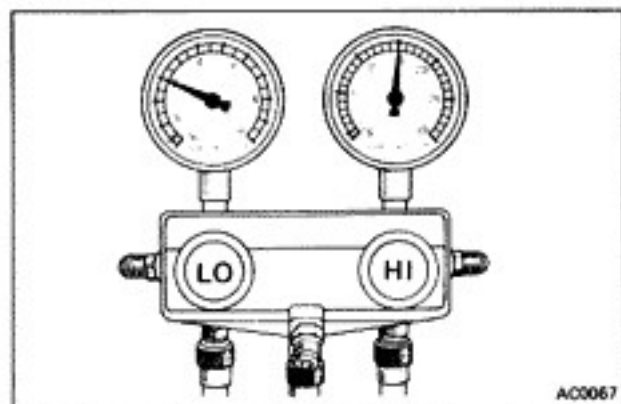


| Symptom seen in refrigeration system | Probable cause | Diagnosis | Remedy |
|---|---|--|---|
| During operation, pressure at low pressure side sometimes becomes a vacuum and sometimes normal | Moisture entered in refrigeration system freezes at expansion valve orifice and temporarily stops cycle, but normal state is restored after a time when the ice melts | Drier in oversaturated state ↓ Moisture in refrigeration system freezes at expansion valve orifice and blocks circulation of refrigerant | (1) Replace receiver and drier (2) Remove moisture in cycle through repeated vacuum purging (3) Charge new refrigerant to proper amount |

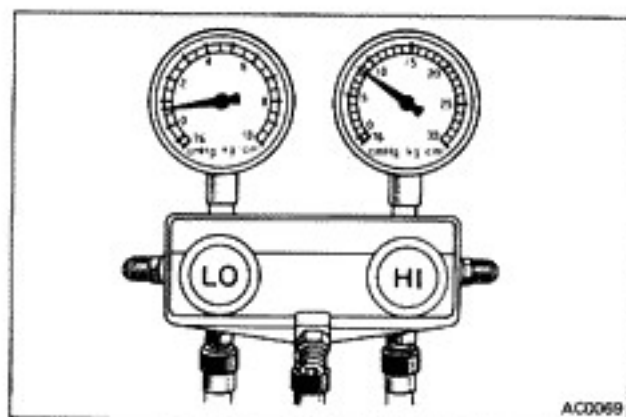

3. INSUFFICIENT REFRIGERANT

Condition: Insufficient cooling


| Symptom seen in refrigeration system | Probable cause | Diagnosis | Remedy |
|---|---|--|--|
| Pressure low at both low and high pressure sides Bubbles seen in sight glass Insufficient cooling performance | Gas leakage at some place in refrigeration system | Insufficient refrigerant in system ↓ Refrigerant leaking | Check with leak tester and repair Charge refrigerant to proper amount |

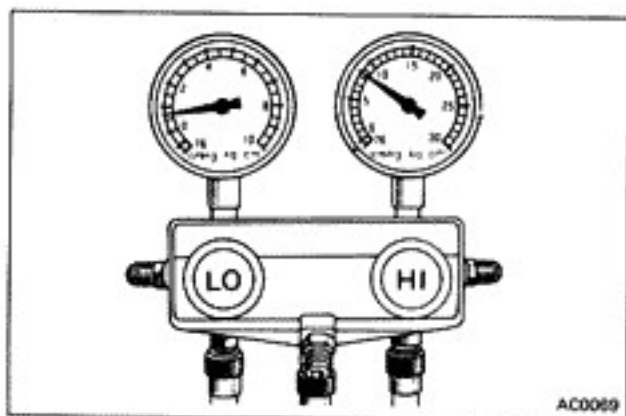

4. POOR CIRCULATION OF REFRIGERANT

Condition: Insufficient cooling


| Symptom seen in refrigeration system | Probable cause | Diagnosis | Remedy |
|--|---|------------------|------------------|
| Pressure low at both low and high pressure sides Frost on tubes from receiver to unit | Refrigerant flow obstructed by dirt in receiver | Receiver clogged | Replace receiver |

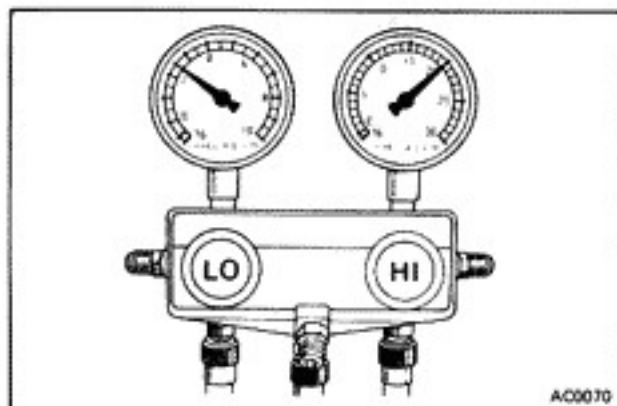

5. REFRIGERANT OVERCHARGE OR INSUFFICIENT COOLING OF CONDENSER

Condition: Does not cool sufficiently


| Symptom seen in refrigeration system | Probable cause | Diagnosis | Remedy |
|--|--|--|---|
| Pressures too high at both low and high pressure sides | <p>Unable to develop sufficient performance due to excessive refrigerant in system</p> <p>Condenser cooling insufficient</p> | <p>Excessive refrigerant in cycle → refrigerant overcharged</p> <p>Condenser cooling insufficient → condenser fins clogged or fan motor faulty</p> | <p>(1) Clean condenser</p> <p>(2) Check fan motor operation</p> <p>(3) If (1) and (2) are in normal state, check refrigerant amount</p> <p>Note: Vent out refrigerant through gauge manifold low pressure side by gradually opening valve.</p> |

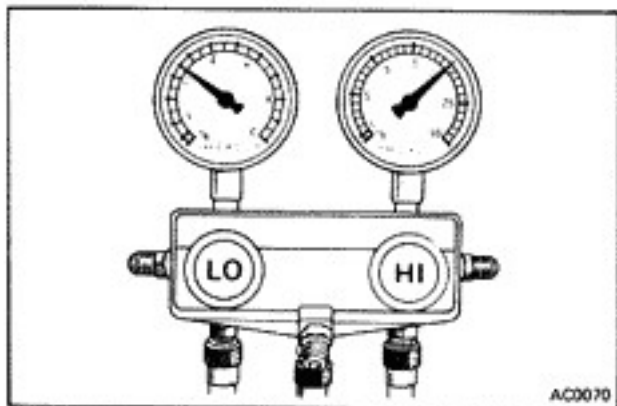

6. EXPANSION VALVE IMPROPERLY MOUNTED/HEAT SENSING TUBE DEFECTIVE (OPENS TOO WIDE)

Condition: Insufficient cooling

| Symptom seen in refrigeration system | Probable cause | Diagnosis | Remedy |
|---|---|--|--|
| <p>Pressures too high at both low and high pressure sides</p> <p>Frost or large amount of</p> | Trouble in expansion valve or heat sensing tube not installed correctly | <p>Excessive refrigerant in low pressure piping</p> <p>↓</p> | <p>(1) Check heat sensing tube installed condition</p> <p>(2) If (1) is normal, test</p> |

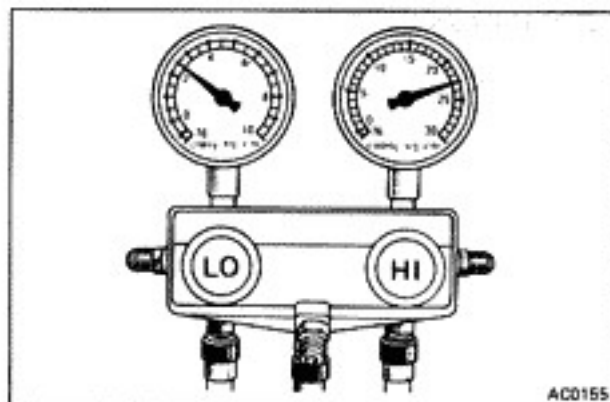


AC0155

7. AIR PRESENT IN REFRIGERATION SYSTEM

Condition: Does not cool down sufficiently

NOTE: These gauge indications are shown when the refrigeration system has been opened and the refrigerant charged without vacuum purging.

| Symptom seen in refrigeration system | Probable cause | Diagnosis | Remedy |
|---|-------------------------------------|---|---|
| Pressure too high at both low and high pressure sides | Air entered in refrigeration system | Air present in refrigeration system ↓ Insufficient vacuum purging | (1) Replace receiver and drier (2) Check compressor oil to see if dirty or insufficient (3) Vacuum purge and charge new refrigerant |

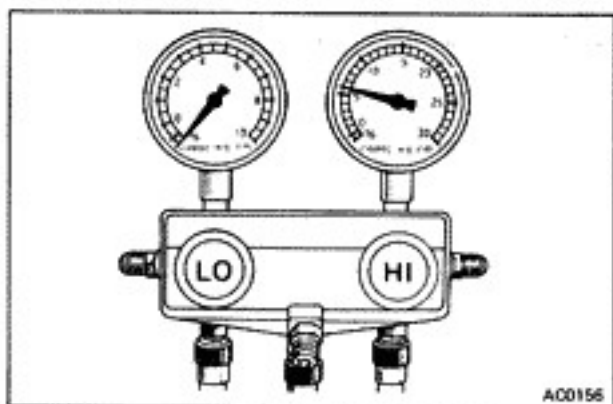

AC0156


8. REFRIGERANT DOES NOT CIRCULATE

Condition: Does not cool (Cools from time to time in some cases)

| Symptom seen in refrigeration system | Probable cause | Diagnosis | Remedy |
|--|---|---|---|
| Vacuum indicated at low pressure side, very low pressure indicated at high pressure side Frost or dew seen on piping before and after receiver and drier or expansion valve | Refrigerant flow obstructed by moisture or dirt in refrigerant freezing or adhering to expansion valve orifice Refrigerant flow obstructed by gas leakage from expansion valve heat sensing tube | Expansion valve orifice clogged ↓ Refrigerant does not flow | Allow to stand for some time and then restart operation to determine if trouble is caused by moisture or dirt If caused by moisture refer to step 2 on page AC-4 If caused by dirt, remove expansion valve and clean off dirt by blowing with air. If unable to remove dirt, replace valve Vacuum purge and charge new refrigerant to proper amount For gas leakage from heat |

9. INSUFFICIENT COMPRESSION

Condition: Does not cool

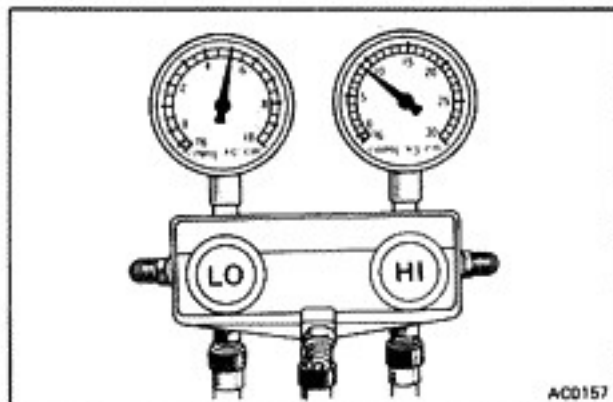


| Symptom seen in refrigeration system | Probable cause | Diagnosis | Remedy |
|--|-----------------------------|--|--------------------|
| Pressure too high at low pressure side Pressure too low at high pressure side | Internal leak in compressor | Compression defective ↓ Valves leaking or broken, sliding parts (piston, cylinder, gasket, connecting rod, etc.,) broken | Replace compressor |

SPECIAL TOOLS AND TEST EQUIPMENT

| Tool | SST No. | Use |
|-----------------------------|-------------|--|
| Manifold gauge set | 07110-78010 | To evacuate and charge system |
| Ohmmeter | | To check magnetic clutch |
| Magnetic clutch tool set | 07110-77011 | Includes the following 8 tools |
| Pressure plate remover | 07112-71010 | To remove pressure plate |
| Shaft plate remover | 07112-15010 | To remove shaft plate |
| Shaft seal remover | 07114-15010 | To remove shaft seal |
| Shaft plate installing tool | 07112-25010 | To install shaft plate |
| Hexagon wrench set | 07110-61050 | To remove service valves and front housing |
| Key press tool | 07114-45010 | To install key |
| Snap ring pliers | 07114-84020 | To remove pressure plate |

AIR CONDITIONING SYSTEM CIRCUIT

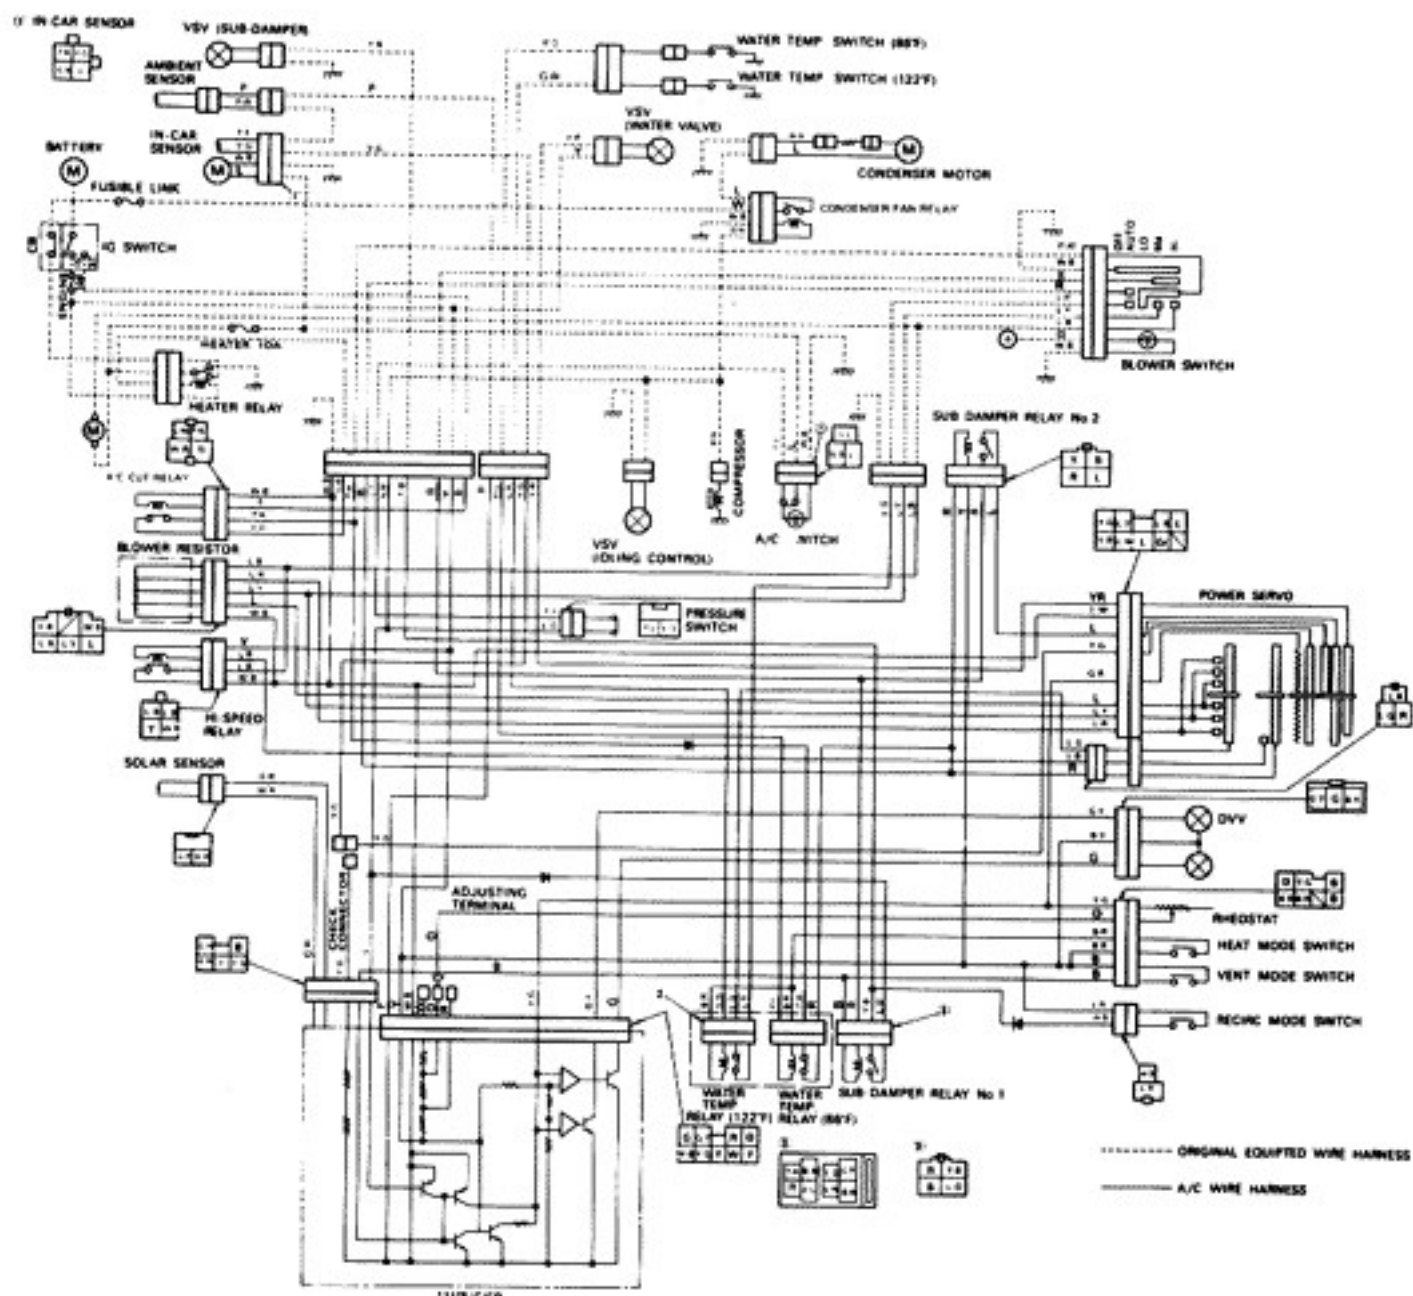


ON-VEHICLE INSPECTION

1. CHECK CONDENSER FINS FOR BLOCKAGE OR DAMAGE

If the fins are clogged, clean them with pressurized water.

CAUTION: Be careful not to damage the fins.

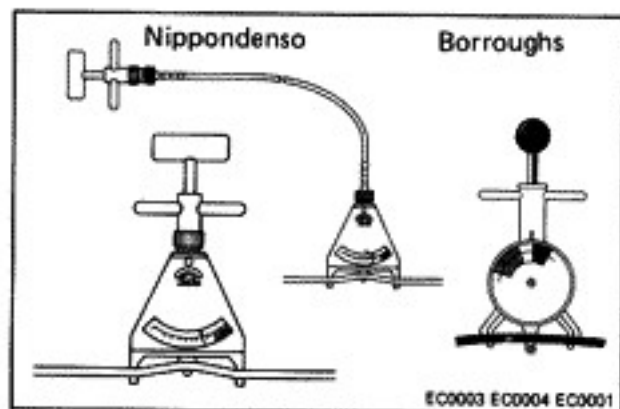

2. CHECK DRIVE BELT TENSION

Using a belt tension gauge, check the drive belt tension.

Belt tension gauge:

Nippondenso BTG-20 (95506-00020) or

Borroughs No. BT-33-73F

Drive belt tension:

New belt 160 ± 20 lb

Used belt 105 ± 10 lb

NOTE:

- "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
- "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.

3. START ENGINE

4. TURN ON A/C SWITCH

Check that the A/C operates at each position of the blower switch.

5. CHECK MAGNETIC CLUTCH OPERATION

6. CHECK THAT IDLE INCREASES

When the magnetic clutch engages, engine revolution should increase.


Standard idle up rpm: 900 — 1,000 rpm

7. CHECK AMOUNT OF REFRIGERANT

If you can see bubbles in the sight glass, additional refrigerant is needed. (See page AC-11)

8. IF NO OR INSUFFICIENT COOLING, INSPECT FOR LEAKAGE

Using a gas leak tester, inspect each component of the refrigeration system. (See page AC-11)

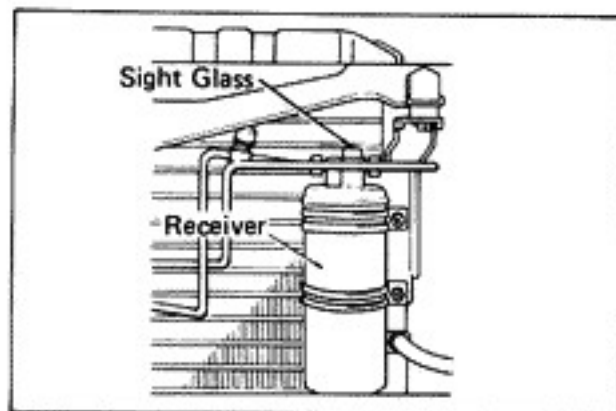


REFRIGERATION SYSTEM

Checking of Refrigerant Charge

1. RUN ENGINE AT FAST IDLE
2. OPERATE AIR CONDITIONER AT MAXIMUM COOLING FOR A FEW MINUTES
3. CHECK AMOUNT OF REFRIGERANT
Observe the sight glass on the receiver.

| Item | Symptom | Amount of refrigerant | Remedy |
|------|---|---------------------------------|--|
| 1 | Bubbles present in sight glass | Insufficient | Check for leak with gas leak tester |
| 2 | No bubbles present in sight glass | None, sufficient or too much | Refer to items 3 and 4 |
| 3 | No temperature difference between compressor inlet and outlet | System is empty or nearly empty | Evacuate and charge system. Then check for leak with gas leak tester |
| 4 | Temperature between compressor inlet and outlet is noticeably different | Proper or too much | Refer to items 5 and 6 |
| 5 | Immediately after the air conditioner is turned off, refrigerant in sight glass stays clear | Too much | Discharge the excess refrigerant to specified amount |
| 6 | When the air conditioner is turned off, refrigerant foams and then stays clear | Proper | |

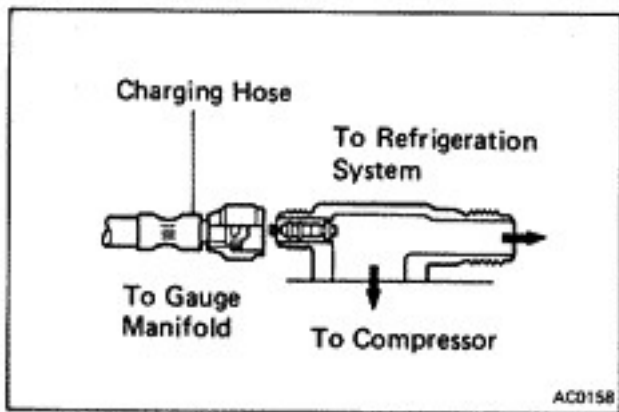

Installation of Manifold Gauge Set

NOTE: Fittings for attaching the manifold gauge set are located on the compressor service valves.

1. CLOSE BOTH HAND VALVES OF MANIFOLD GAUGE SET
2. INSTALL CHARGING HOSES OF GAUGE SET TO SERVICE VALVES

Connect the low pressure hose to the suction service valve and the high pressure hose to the discharge service valve. Tighten the hose nuts by hand.

NOTE: Do not apply compressor oil to the seat of the connection.

Discharging of Refrigeration System

1. CONNECT MANIFOLD GAUGE SET TO COMPRESSOR
2. PLACE FREE END OF CENTER HOSE IN A SHOP TOWEL
3. DISCHARGE SYSTEM

(a) Slowly open the high pressure hand valve to adjust the refrigerant flow. Do not open valve very much.

CAUTION: If refrigerant is allowed to escape too fast, compressor oil will be drawn out of the system.

(b) Check the shop towel to make sure no oil is being discharged.

If oil is present, partially close the hand valve.


(c) After the manifold gauge reading drops below 3.5 kg/cm^2 (50 psi, 343 kPa), slowly open the low pressure valve.

(d) As the system pressure drops, gradually open both high and low valves until both gauges read 0 kg/cm^2 (0 psi, 0 kPa).

Evacuating and Charging of Refrigeration System

NOTE:

- Whenever the air conditioning system has been exposed to the atmosphere, it must be evacuated.
- After installation of a component, the system should be evacuated for approximately 15 minutes. A component in service that has been opened for repair should be evacuated for 30 minutes.

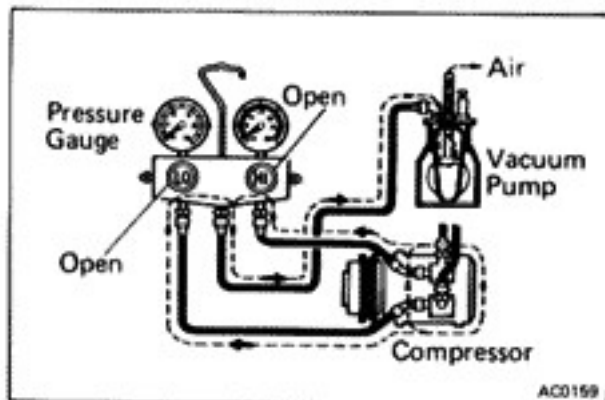

1. EVACUATE SYSTEM


- (a) Connect the manifold gauge set. (See page AC-11)
- (b) Install the center hose of gauge set on the vacuum pump inlet.
- (c) Run the vacuum pump, and then open both hand valves.
- (d) After about ten minutes, check that the low pressure gauge reads more than 600 mmHg (23.62 in. Hg, 80.0 kPa) of vacuum.

If the reading is not more than 600 mmHg (23.62 in. Hg, 80.0 kPa), close both valves and stop the vacuum pump. Check the system for leaks and repair as necessary.

If no leakage is found, continue evacuating the system.

(e) After the low pressure gauge indicates more than 700 mmHg (27.56 in. Hg, 93.3 kPa) of vacuum, continue evacuating for 15 minutes.


(f) Close both hand valves and stop the vacuum pump.

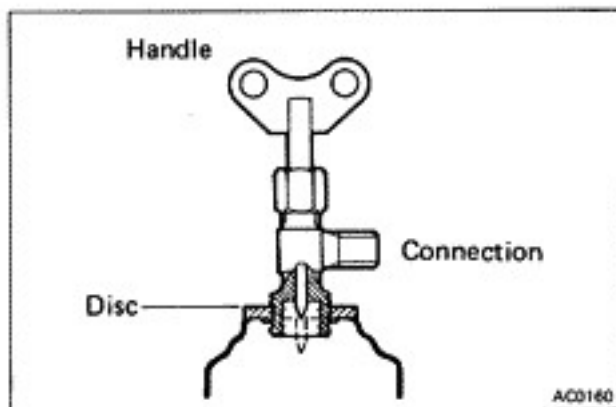

2. INSTALL REFRIGERANT CONTAINER TAP VALVE

CAUTION: Observe the precautions listed in the front of this section.

- Before installing the valve on the refrigerant container, turn the handle counterclockwise until the valve needle is fully retracted.
- Turn the disc counterclockwise until it reaches its highest position.
Screw down the valve on the refrigerant container.
- Connect the center hose to the valve fitting. Turn the disc fully clockwise by hand.
- Turn the handle clockwise to make a hole in the sealed tap.
- Turn the handle fully counterclockwise to fill the center hose with gas. Do not open the high and low pressure valves.
- Loosen the center hose nut connected to the center fitting of the manifold gauge until a hiss can be heard. Allow air to escape for a few seconds, and then tighten the nut.

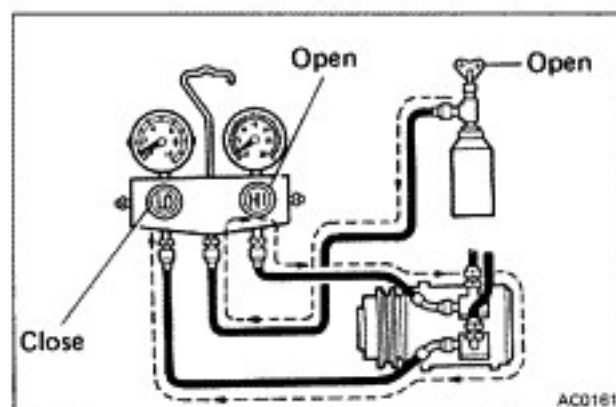

3. TEST SYSTEM FOR LEAKS

NOTE: After evacuating the system, check for leaks.

- Install the refrigerant container tap valve as described in step 2.
- Open the high pressure valve to charge the system with refrigerant vapor.
- When the low pressure gauge reads 1 kg/cm^2 (14 psi, 98 kPa), close the high pressure valve.
- Using a halide gas leak detector, propane torch, or electric leak detector, check the system for leaks.

If a leak is found, repair the faulty component or connection.


- After checking and repairing the system, perform the following:
 - Turn the container tap handle fully clockwise.
 - Disconnect the center hose from the can valve fitting.
 - Evacuate the system for at least 15 minute. (See step 1 on page AC-12)

4. CHARGE EMPTY SYSTEM (LIQUID)

NOTE: This step is to charge an empty system through the high pressure side with refrigerant in a liquid state. When the refrigerant container is held upside down, refrigerant will enter the system as a liquid.

CAUTION:

- Never run the engine when charging the system through

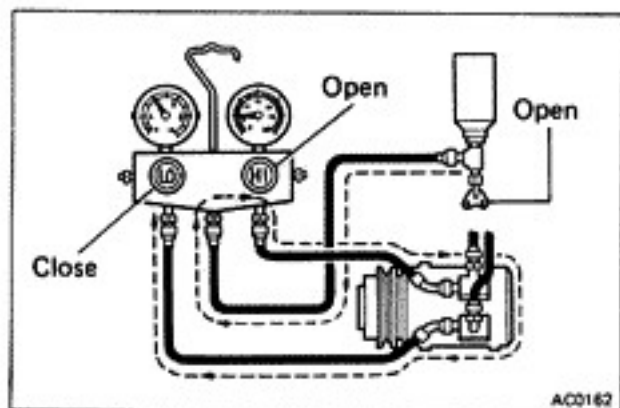

- Close both high and low pressure valves completely after the system is evacuated.
- Install refrigerant container tap valve as described in step 2.
- Open the high pressure valve fully, and keep the container upside down.
- Charge the system with more than one container (400 g, 0.9 lb) than the specified amount. Then, close the high pressure valve.

Specified amount: 650 – 750 g (1.4 – 1.7 lb)


NOTE:

- A fully charged system is indicated by the receiver sight glass being free of any bubbles.
- If the low pressure gauge does not show a reading, the system is clogged and must be repaired.

5. CHARGE EMPTY SYSTEM OR PARTIALLY CHARGED SYSTEM (VAPOR)

NOTE:

- This step is to charge the system through the low pressure side with refrigerant in a vapor state. When the refrigerant container is placed rightside up, refrigerant will enter the system as a vapor.
- Put the refrigerant container in a pan of warm water (maximum temperature 40°C or 104°F) to keep vapor pressure in the container slightly higher than vapor pressure in the system.

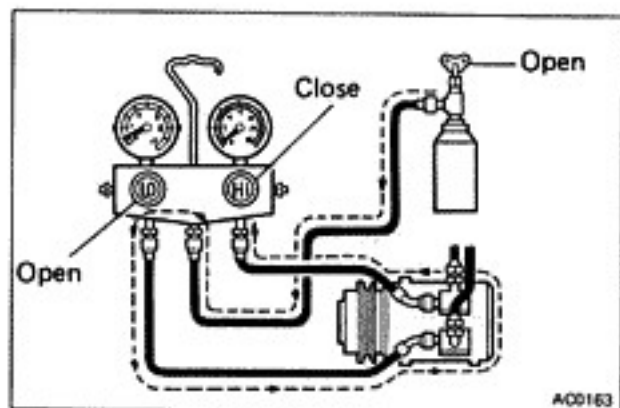


- Install refrigerant container tap valve as described in step 2.
- Open the low pressure valve. Adjust the valve so that the low pressure gauge does not read over 4.2 kg/cm² (60 psi, 412 kPa).
- Run the engine at fast idle, and operate the air conditioner.

CAUTION: Be sure to keep the container in the upright position to prevent liquid refrigerant being charged into the system through the suction side, resulting in possible damage to the compressor.

- Charge the system with more than one container (400 g, 0.9 lb) than the specified amount. Then, close the low pressure valve.

Specified amount: 650 – 750g (1.4 – 1.7 lb)

NOTE: A fully charged system is indicated by the receiver sight glass being free of any bubbles.

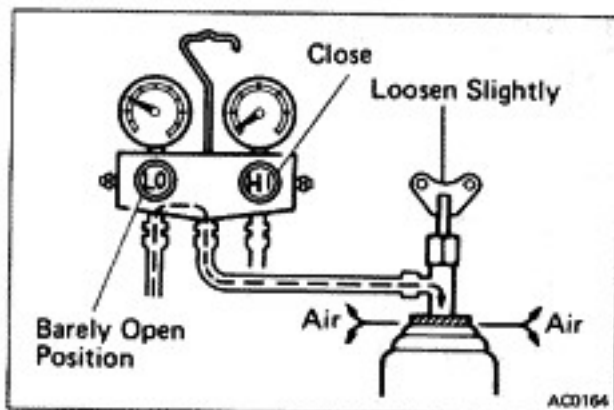

6. IF NECESSARY, CHARGE SYSTEM WITH ANOTHER CONTAINER

- When the refrigerant container is empty, close the pressure valves.
- Remove the container tap valve from the container.
- Attach the container tap valve to a new refrigerant container.
- Purge the air from the center hose by barely opening the low pressure valve and loosening the valve disc.
- Make a hole in the sealed tap of the new container and charge the system.


CAUTION: Be careful not to overcharge the refrigerant as it may cause failure of the bearings and belt.

7. WHEN SYSTEM IS FULLY CHARGED, DISCONNECT MANIFOLD GAUGE SET

- Close both low and high pressure valves.
- Close valve at refrigerant container. If using one pound containers of R-12, allow remaining refrigerant to escape by slowly removing the charge line.
- Turn off the engine.
- Using a shop rag, quickly remove both hoses from the compressor service valves.

WARNING: Care must be taken to protect eyes and skin when removing the high pressure hose.

- Put the cap nuts on the service valve fittings.

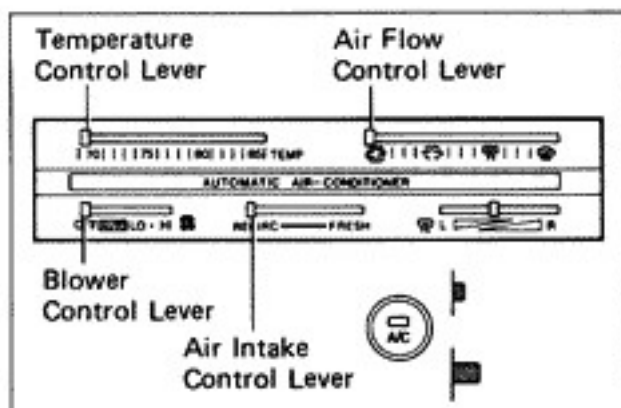


FUNCTIONAL TEST AND ADJUSTMENT

Vacuum Circuit

ON-VEHICLE INSPECTION

1. REMOVE UNDERCOVER
2. DISCONNECT FROM NORMAL CONNECTOR AND RECONNECT TO CHECK CONNECTOR OF AMPLIFIER
3. PLACE TEMPERATURE CONTROL LEVER AT 77
4. CHECK VACUUM CIRCUIT
 - (a) Run the engine and observe the movement of the power servo stem visually for one minute or more. The stem must be stable.
 - (b) If the stem moves, check the vacuum circuit for leaks.
5. REINSTALL UNDERCOVER

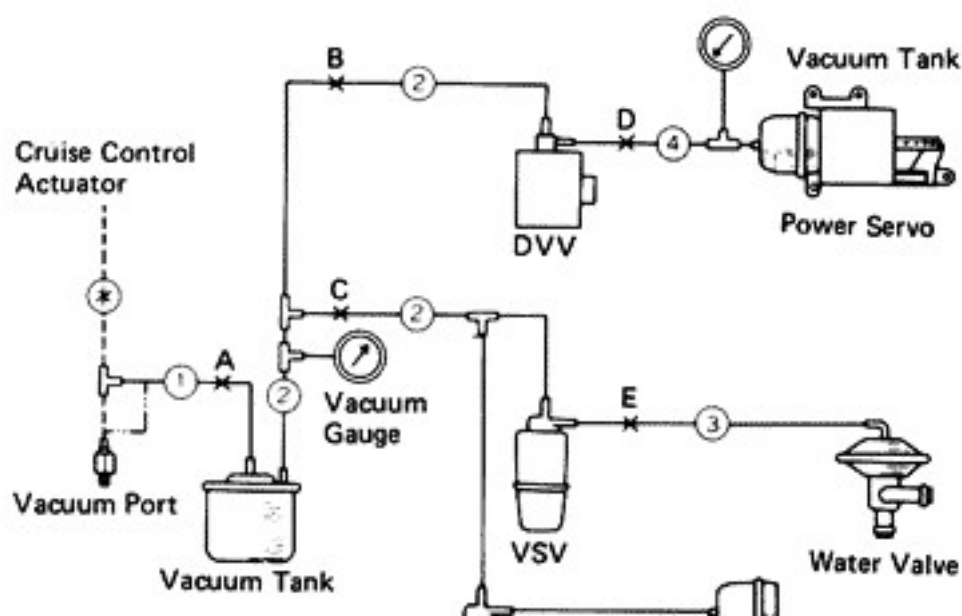

Power Servo Unit Operation

ON-VEHICLE INSPECTION

1. REMOVE COMPONENTS FROM VEHICLE


- (a) Undercover
- (b) Center cluster



2. RECONNECT TO CHECK CONNECTOR

3. RUN ENGINE AT IDLING

4. PLACE BLOWER CONTROL LEVER AT AUTO AIR FLOW CONTROL LEVER AT VENT TEMPERATURE CONTROL LEVER AT 77

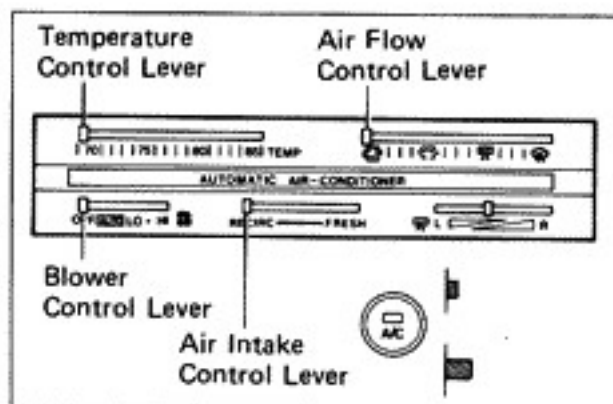

5. CHECK BLOWER SPEED CONTROL BY SLIDING TEMPERATURE CONTROL LEVER

- (a) When sliding the lever to 70, the blower speed will change in five steps.
- (b) When sliding the lever to 85, the blower speed will change in four steps.



6. CHECK WATER VALVE OPERATION BY SLIDING TEMPERATURE CONTROL LEVER

- (a) When placing the lever at the left side fully, the water valve will close.
- (b) When placing the lever at 75 or more, the water valve will open.



7. CHECK POWER SERVO STEM FOR A SMOOTH OPERATION BY SLIDING TEMPERATURE CONTROL LEVER

8. REINSTALL UNDERCOVER AND CENTER CLUSTER

Automatic Temperature Control ON-VEHICLE INSPECTION

1. REMOVE COMPONENTS FROM VEHICLE

- (a) Undercover
- (b) Center cluster

2. RECONNECT TO CHECK CONNECTOR

3. PLACE TEMPERATURE CONTROL LEVER AT 77

4. RUN ENGINE AT IDLING




5. CHECK AUTOMATIC TEMPERATURE CONTROL

- (a) Verify that the white line marked on the stem is positioned within the orange area on the power servo unit.
- (b) If the white line positions are not in the orange area, adjust as follows:

6. ADJUST AUTOMATIC TEMPERATURE CONTROL

- (a) Normally the orange adjusting terminal is connected.
- (b) If the white line on the stem is in the red area, change the connection to the red adjusting terminal.
- (c) If the white line is within the white area, change the connection to the white adjusting terminal.


7. REINSTALL REMOVED PARTS IN REVERSE ORDER

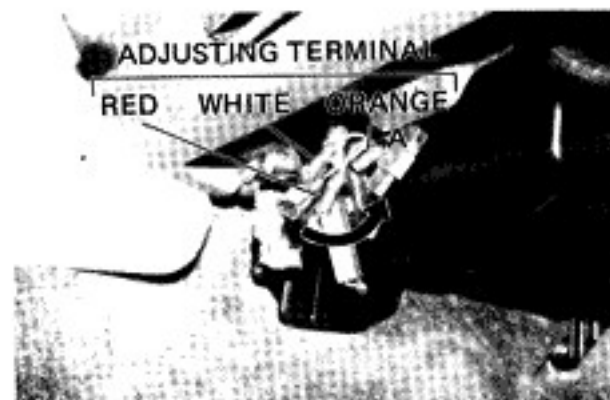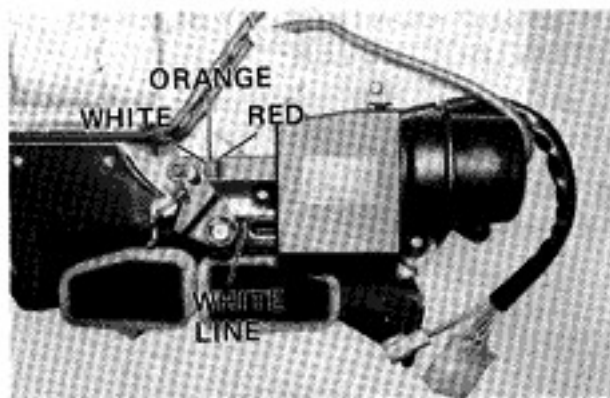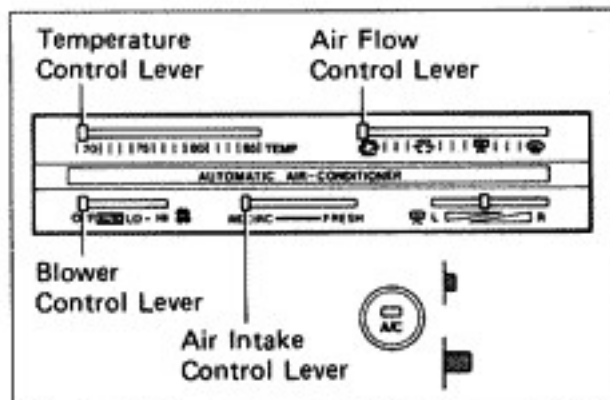

Air Mix Damper Linkage

1. REMOVE COMPONENTS FROM VEHICLE


- (a) Undercover
- (b) Center cluster

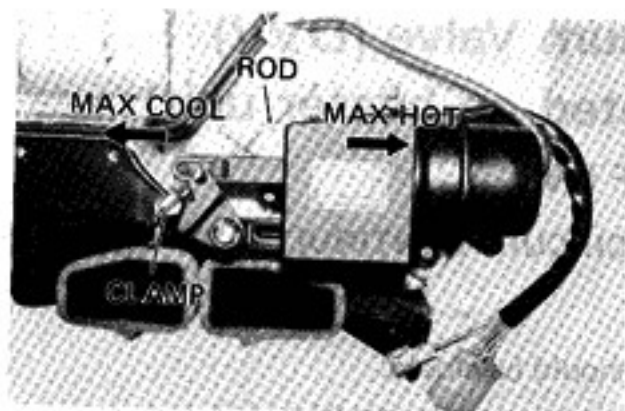

2. CHECK AIR MIX DAMPER

- (a) Disconnect the rod from the clamp.
- (b) Disconnect the No. 4 vacuum hose between the DVV and vacuum motor in the power servo unit to release the vacuum pressure in the vacuum motor. The stem of the power servo extends fully to the maximum cooling position.
- (c) Position the damper to maximum cooling and connect the rod to the clamp.
- (d) Using a commercial vacuum pump, apply 250 mmHg (9.84 in.Hg, 33.3 kPa) of vacuum to the vacuum motor and verify that the damper moves to the maximum heating position.

3. REINSTALL REMOVED PARTS IN REVERSE ORDER

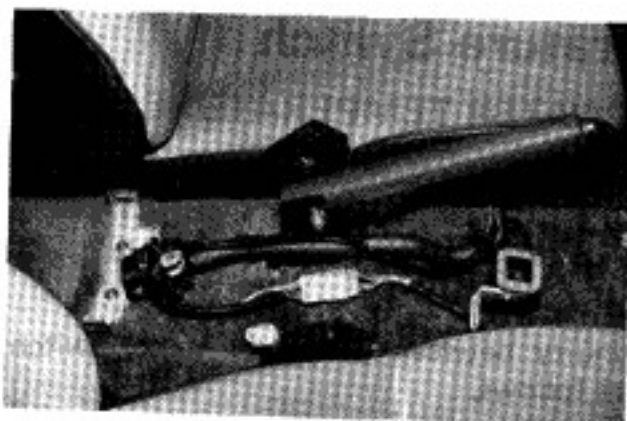

Sensor Circuit

1. IN-CAR SENSOR

(Located in console box)

Check sensor resistance.

1.7 – 5.6 k Ω (0 – 25°C or 32 – 77°F)

2. VERIFY AIR IS SUCKED IN IN-CAR SENSOR

NOTE: If there is an open circuit in the sensor, the system will operate at maximum heating.

Conversely, if there is a short in the system, it will operate at maximum cooling.


3. AMBIENT SENSOR

(Located on condenser)

Check sensor resistance.

Ambient Sensor



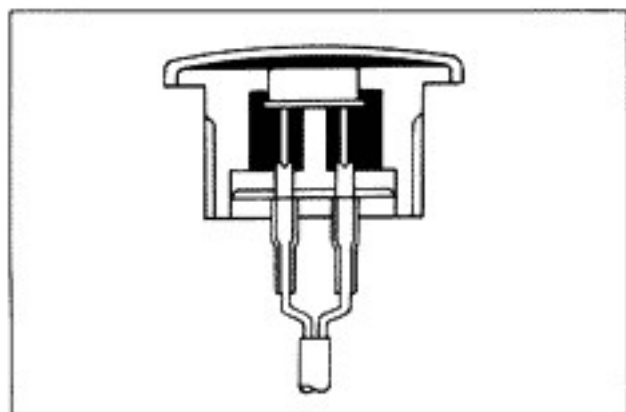

4. SOLAR SENSOR

Check sensor voltage.

0.3 – 0.5V (In Daylight)




Double Vacuum Valve (DVV) (DVV is located on heater unit)

INSPECTION OF DVV

CHECK VACUUM CIRCUIT CONTINUITY BY BLOWING AIR

- OFF state
All circuit should be closed.
- Apply 12 volts to the positive (+) terminal and ground terminal T_1 .
There should be continuity between B and C at this time.
- Apply 12 volts to the positive (+) terminal and ground terminal T_2 . There should be continuity between A and B at this time.

If a problem is found, replace the DVV.

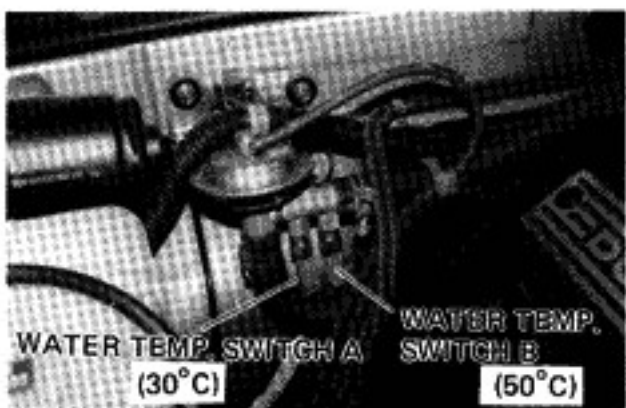

Water Temperature Switch

INSPECTION OF WATER TEMPERATURE SWITCH

CHECK WATER TEMPERATURE SWITCH OPERATION

- Disconnect the 1-pole connector from the water temp. switch.
- Check continuity between the water temp. switch and ground as follows.

| Coolant temp. | A | B |
|----------------------------------|---------------|---------------|
| Less than 30°C (86°F) | CONTINUITY | CONTINUITY |
| From 30°C (86°F) to 50°C (122°F) | NO CONTINUITY | NO CONTINUITY |



Condenser Motor

(See page AC-9)

ON-VEHICLE INSPECTION

1. CHECK CONDENSER MOTOR OPERATION


NOTE: When the air conditioner is on, the condenser motor must rotate.


2. CHECK A/C RELAY OPERATION

NOTE: When the air conditioner is on, the A/C relay must come on.

If a problem is found, replace defective part.

SYSTEM COMPONENTS

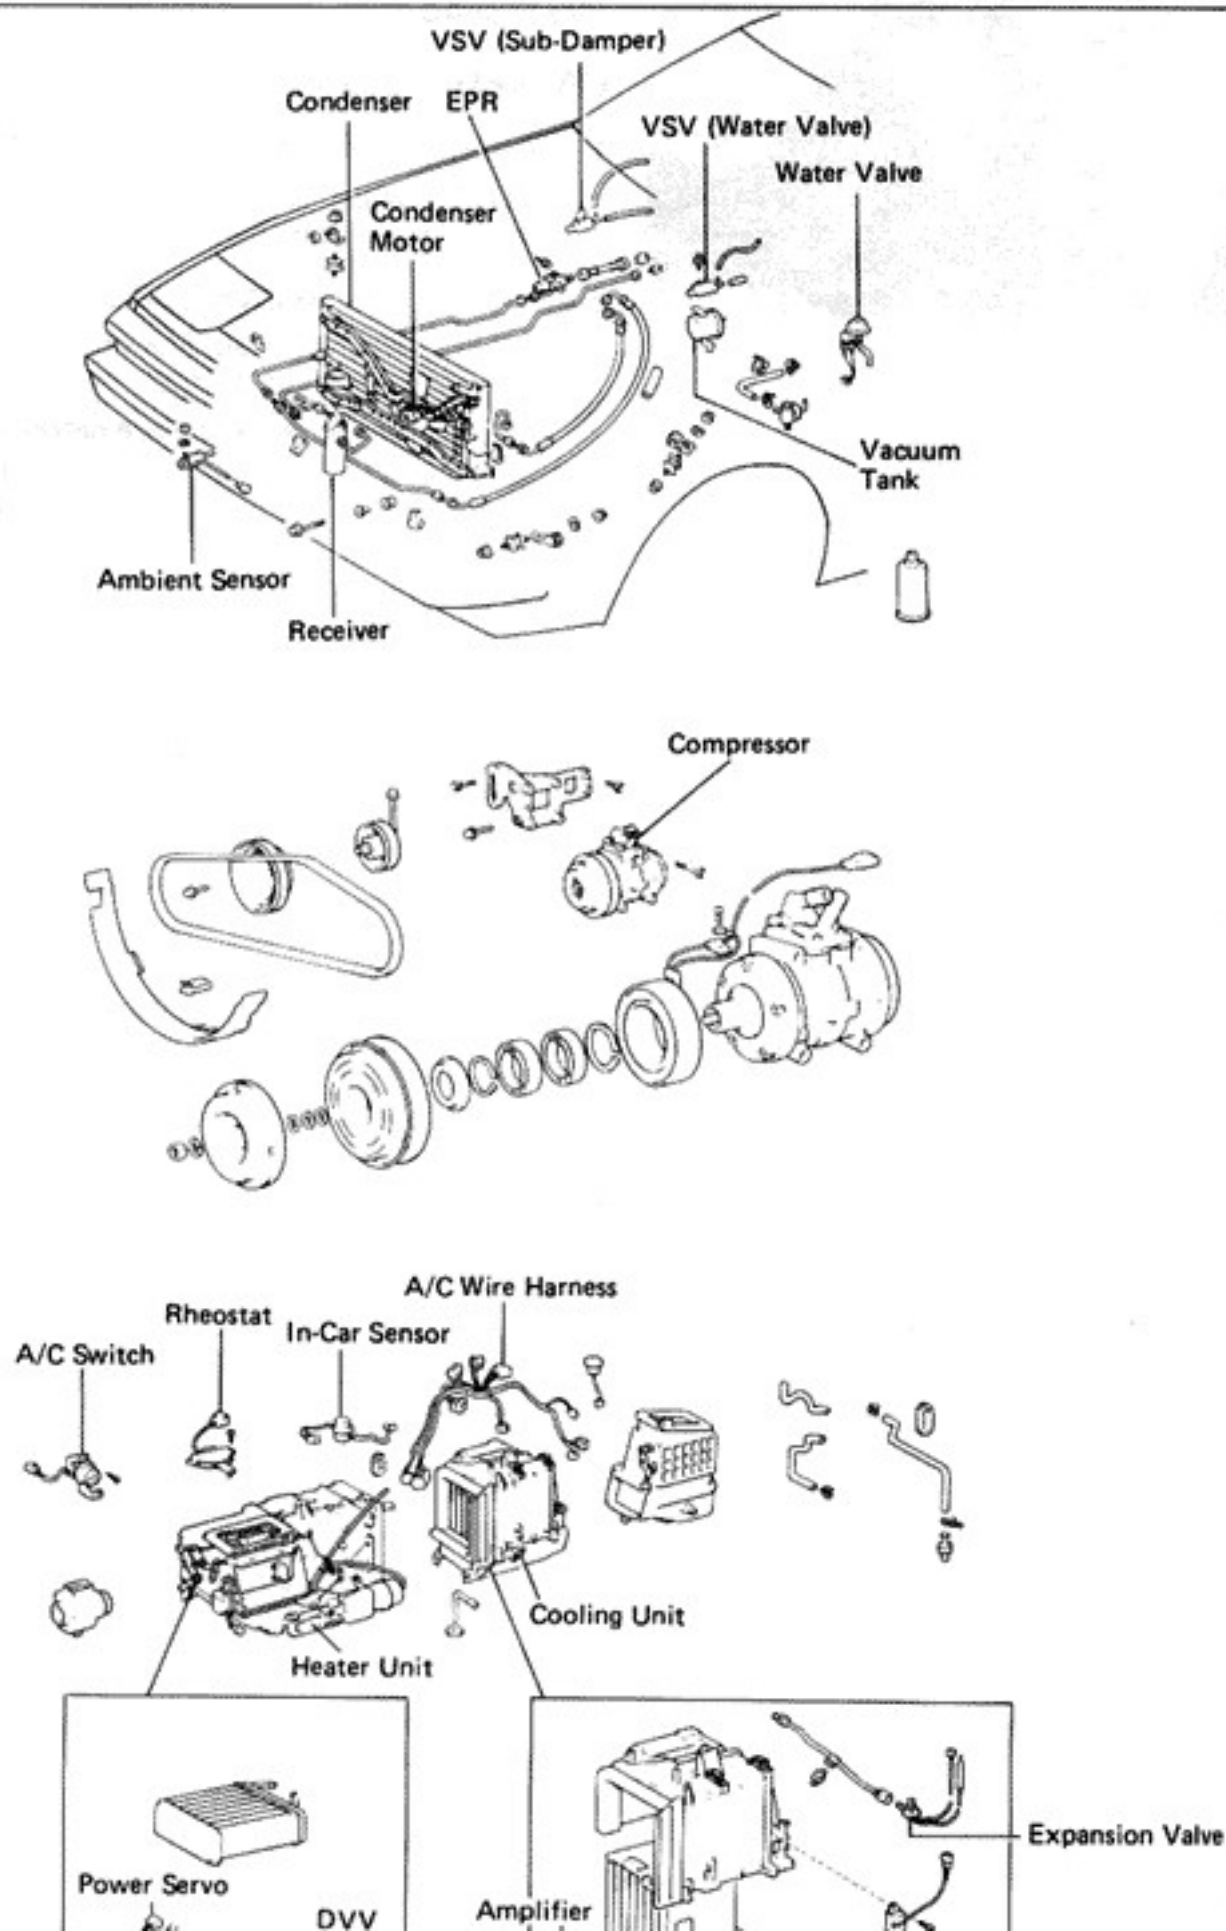

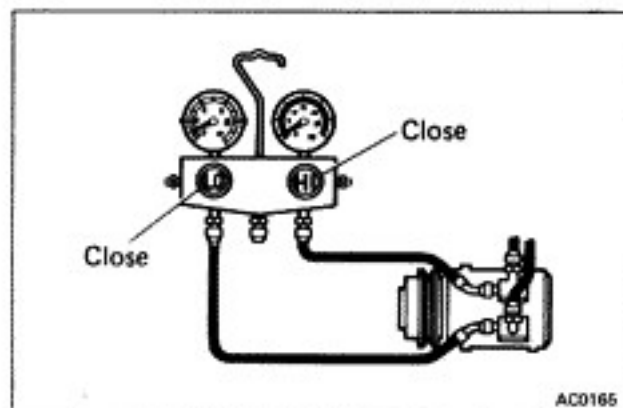

COMPRESSOR

(See page AC-22)

ON-VEHICLE INSPECTION

1. INSTALL MANIFOLD GAUGE SET

- Close the HI and LO hand valves.
- Connect the high pressure hose to the discharge service valve of the compressor.
- Connect the low pressure hose to the suction service valve of the compressor.

2. RUN ENGINE AT FAST IDLE

3. CHECK COMPRESSOR FOR FOLLOWING:

- High pressure gauge reading is not low and low pressure gauge reading is not higher than normal.
- Metallic sound
- Leakage from the shaft seal


If defects are found, repair the compressor.

4. CHECK MAGNETIC CLUTCH

- Inspect the pressure plate and the rotor for signs of oil.
- Check the clutch bearings for noise and grease leakage.
- Using an ohmmeter, measure the resistance of the stator coil between the clutch lead wire and ground.

If the resistance is not within tolerance, replace the coil.

Standard resistance: $3.7 \pm 0.2 \Omega$ at 20°C (68°F)

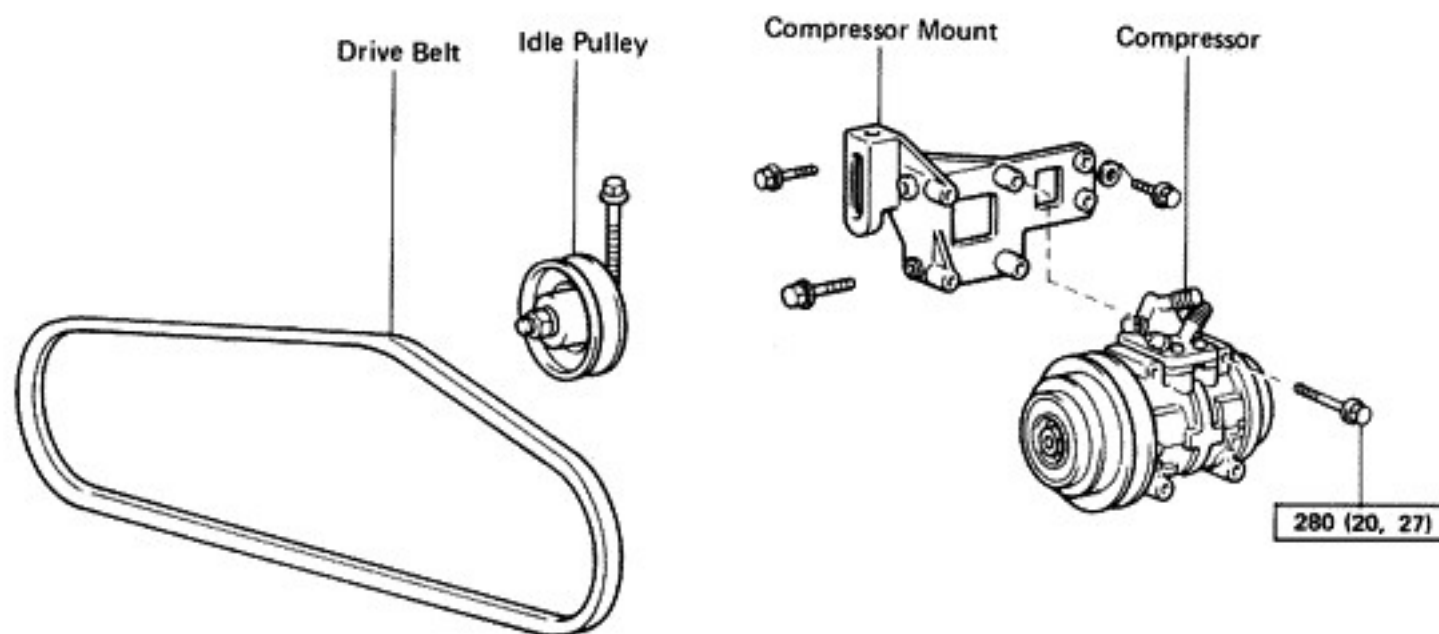


kg-cm (ft-lb, N-m) : Specified torque

REMOVAL OF COMPRESSOR

1. RUN ENGINE AT IDLE WITH AIR CONDITIONING ON FOR 10 MINUTES
2. DISCONNECT NEGATIVE CABLE FROM BATTERY
3. DISCONNECT CLUTCH LEAD WIRE FROM WIRING HARNESS
4. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM (See page AC-12)
5. DISCONNECT TWO FLEXIBLE HOSES FROM COMPRESSOR SERVICE VALVES

Cap the open fitting immediately to keep moisture out of the system.

6. REMOVE COMPRESSOR

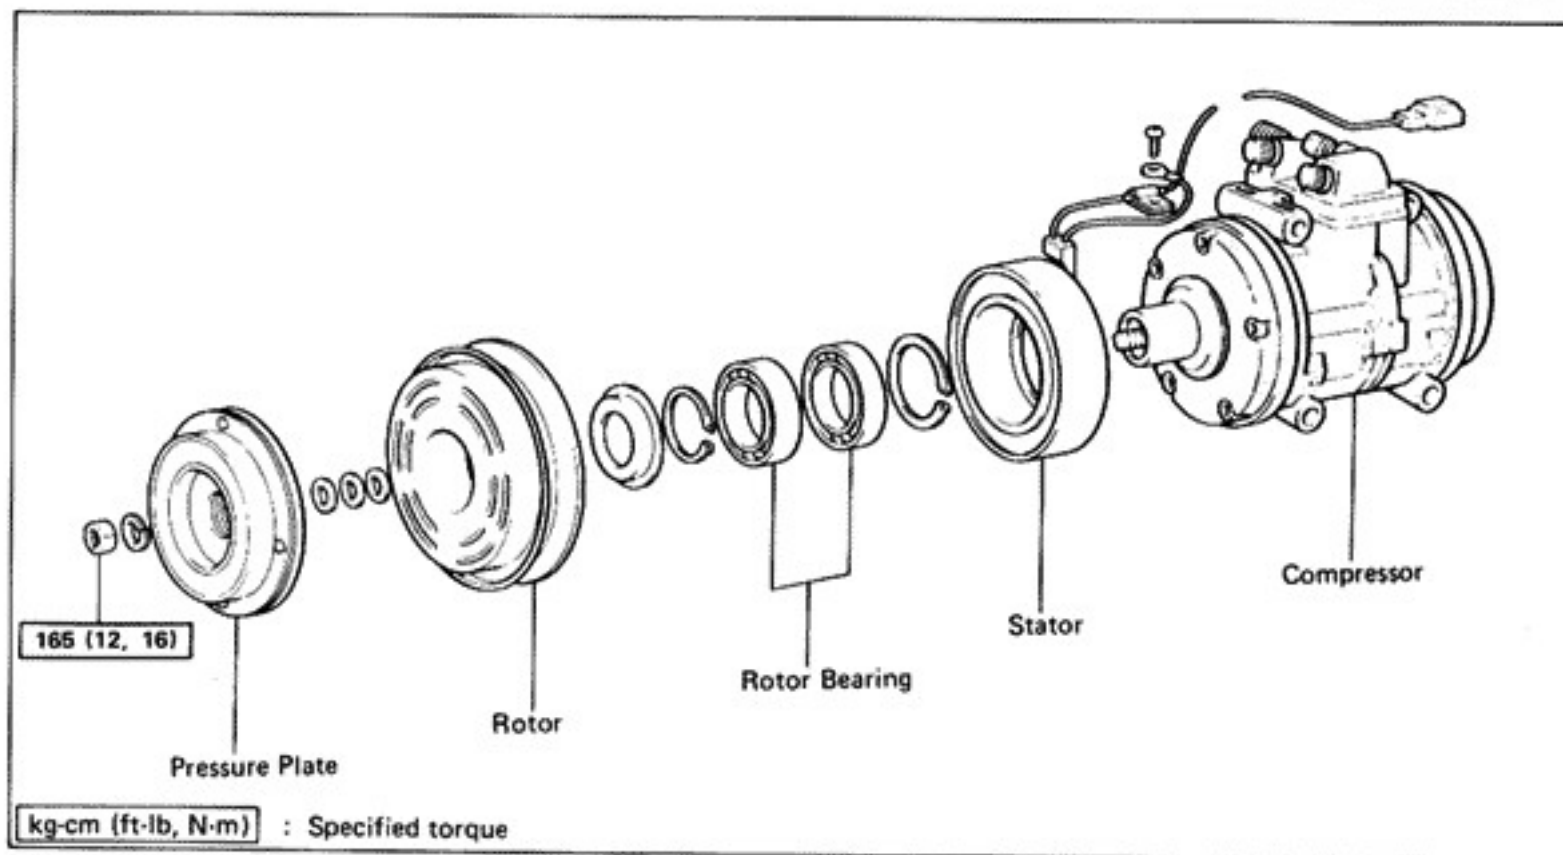


DISASSEMBLY OF MAGNETIC CLUTCH

1. REMOVE PRESSURE PLATE

(a) Using SST and a socket, remove the shaft nut.
SST 07110-77011



(b) Using SST and a socket, remove the pressure plate.
SST 07112-71010

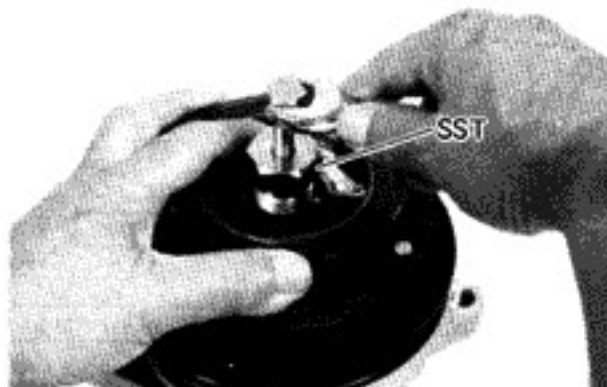

(c) Remove the shims from the shaft.






2. REMOVE ROTOR

- (a) Using SST, remove the snap ring.
SST 07114-84020




- (b) Using a plastic hammer, tap the rotor off the shaft.
CAUTION: Be careful not to damage the pulley when tapping on the rotor.

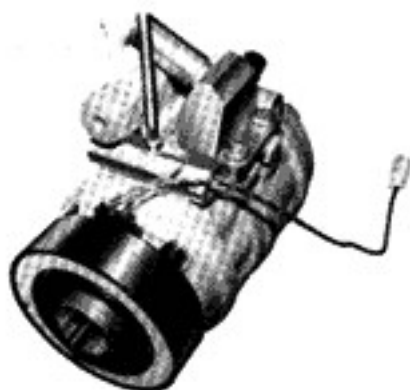


3. REMOVE STATOR

- (a) Disconnect the stator lead wires from the compressor housing.

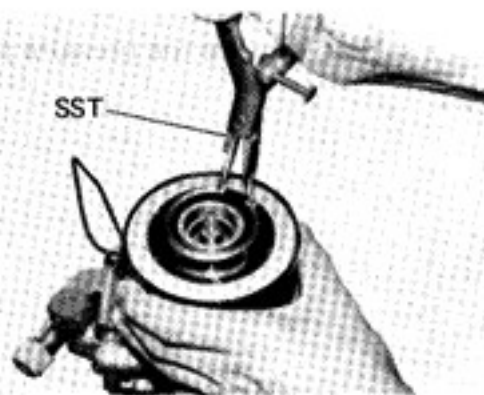

- (b) Using SST, remove the snap ring. Remove the stator.
SST 07114-84020

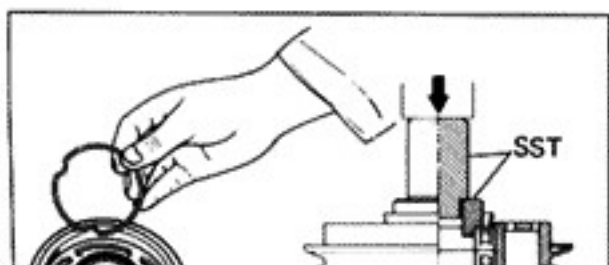

4. REMOVE ROTOR BEARINGS


NOTE: Press the bearings out only if they are to be replaced.

- (a) Remove the bearing snap ring from the rotor.
(b) Using SST, press out the two bearings.

SST 07110-77011

5. INSPECT PRESSURE PLATE AND ROTOR

- (a) Inspect the pressure plate and rotor surfaces for wear and scoring. Replace if necessary.
- (b) Check the rotor bearings for wear and leakage grease. Replace if necessary.

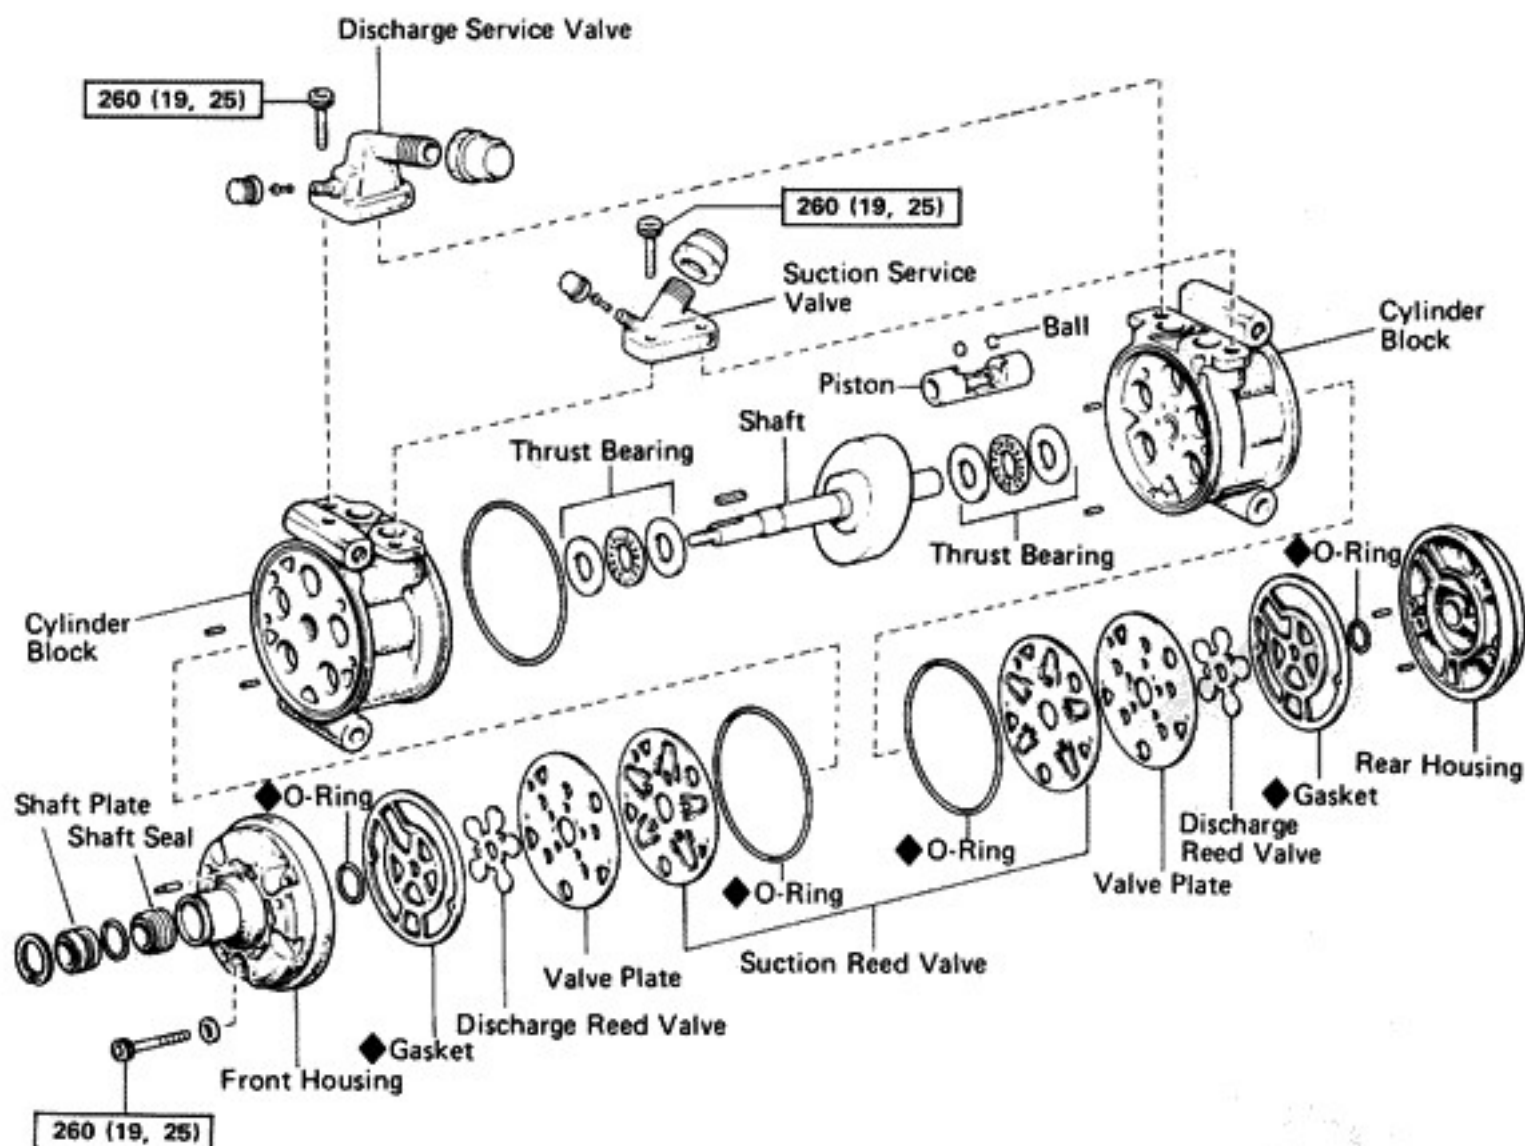

kg-cm (ft-lb, N-m) : Specified torque

◆ Non-reusable part

DISASSEMBLY OF COMPRESSOR


1. REMOVE FELT



**2. REMOVE CIRCLIP**

Using SST, remove the circlip.

SST 07114-84020

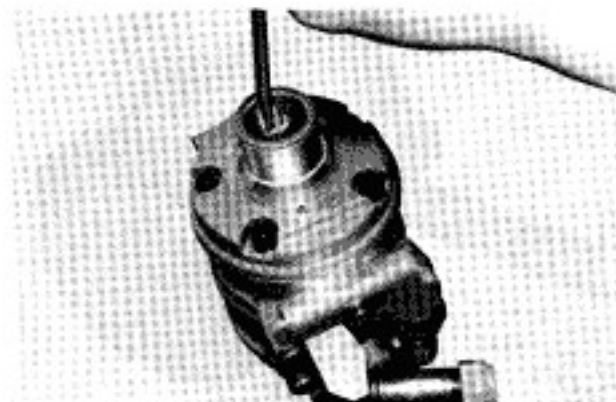**3. REMOVE KEY**

Using a hammer and punch, drive the key from the shaft.

**4. APPLY COMPRESSOR OIL TO INNER BORE**

Apply compressor oil to the inner bore of the compressor.


**5. REMOVE SHAFT PLATE**

(a) Insert SST against the shaft. Then push the holder ring downward.

SST 07112-15010



(b) Pull up the bar of the remover, and remove the shaft plate.

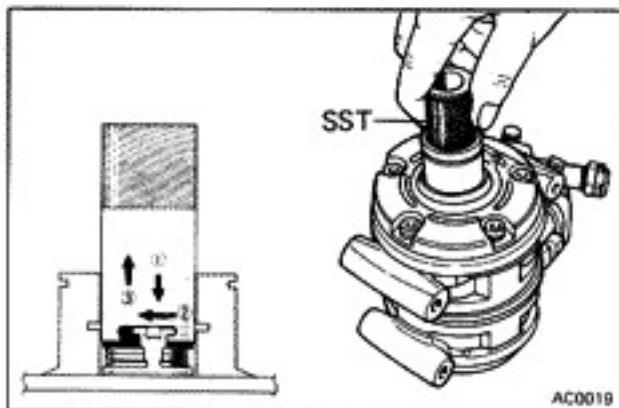


6. REMOVE SHAFT SEAL

Insert SST against the shaft, and turn it clockwise while pressing in the remover.

Then remove the shaft seal.

SST 07114-15010

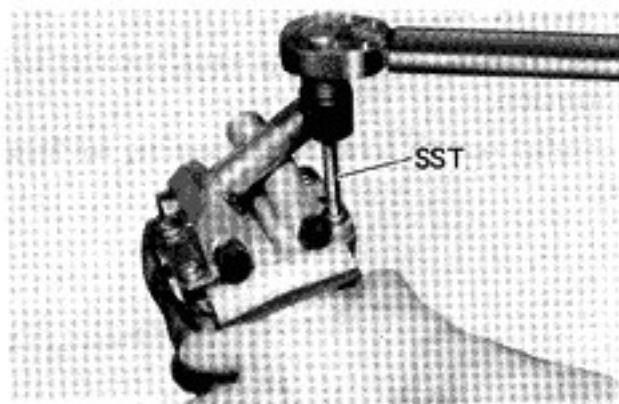


7. REMOVE TWO SERVICE VALVES

(a) Using SST, remove the bolts holding the two service valves.

SST 07110-61050

(b) Remove the O-rings from the service valves and discard them.

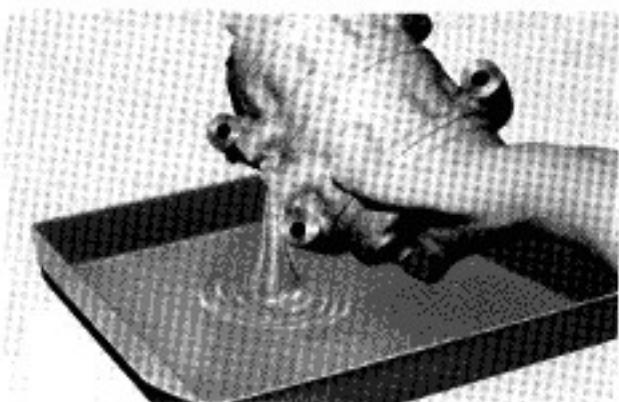

8. DRAIN OIL INTO CONTAINER



9. REMOVE FRONT HOUSING

(a) Using SST, remove the six through bolts.

NOTE: Do not reuse the six washers.

SST 07110-61050


(b) Using a hammer and punch, remove the front housing by tapping on the protrusion.

CAUTION: Be careful not to scratch the sealing surface of the front housing.




**10. REMOVE FRONT VALVE PLATE**

Remove the two pins from the front housing. Discard the pins.

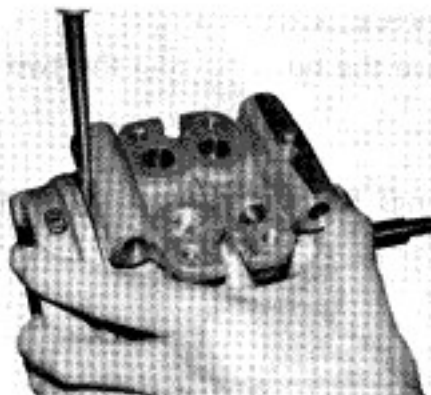
**11. REMOVE REAR HOUSING**

Using a hammer and punch, remove the rear housing by tapping on the protrusion.

CAUTION: Be careful not to scratch the sealing surface of the rear housing.

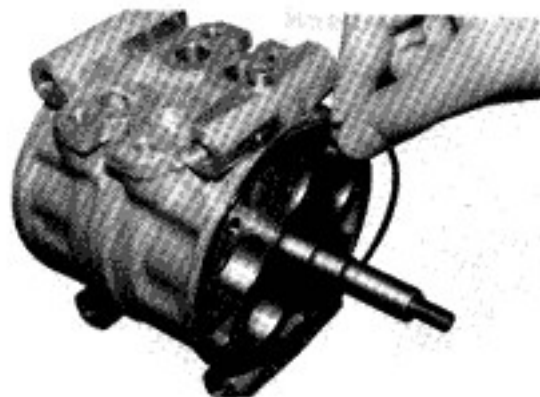**12. REMOVE FRONT AND REAR O-RINGS FROM CYLINDER BLOCK**

Discard the O-rings.

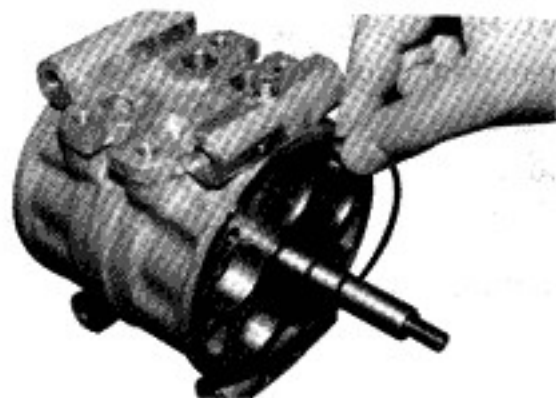**ASSEMBLY OF COMPRESSOR**


(See page AC-27)

1. INSTALL REAR VALVE PLATE ON REAR CYLINDER

- (a) Install the two pins in the rear cylinder.
- (b) Lubricate a new O-ring with compressor oil. Install the O-ring in the rear cylinder.
- (c) Install the rear suction valve over the pins on the rear cylinder.

NOTE: The front and rear suction valves are the same.




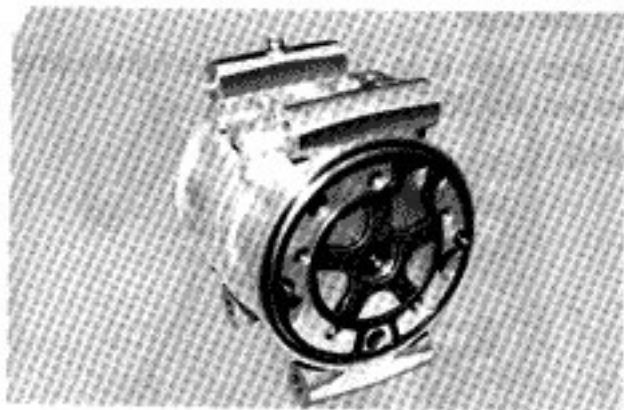

- (d) Install the rear valve plate together with the discharge valve over the pins on the rear cylinder.

NOTE: The rear valve plate is marked "R".

- (e) Lubricate the gasket with compressor oil. Install the gasket on the valve plate.

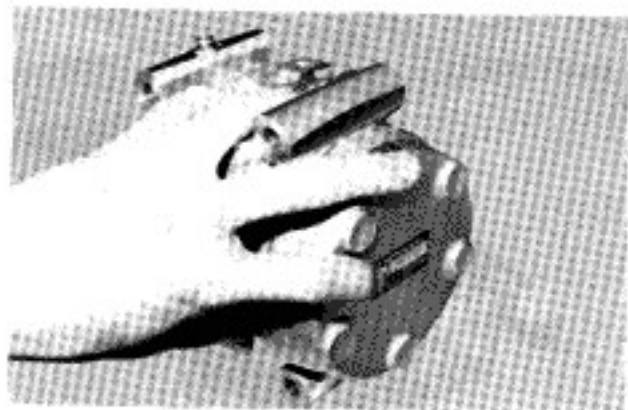

2. INSTALL REAR HOUSING ON REAR CYLINDER




3. INSTALL FRONT VALVE PLATE ON FRONT CYLINDER

- (a) Install the two pins in the front cylinder.
- (b) Lubricate a new O-ring with compressor oil. Install the O-ring in the rear housing.
- (c) Install the front suction valve over the pins on the front cylinder.
- (d) Install the front valve plate together with the discharge valve over the pins on the front cylinder.

NOTE: The front valve plate is marked with an "F".

- (e) Lubricate gasket with compressor oil. Install the gasket on the valve plate.

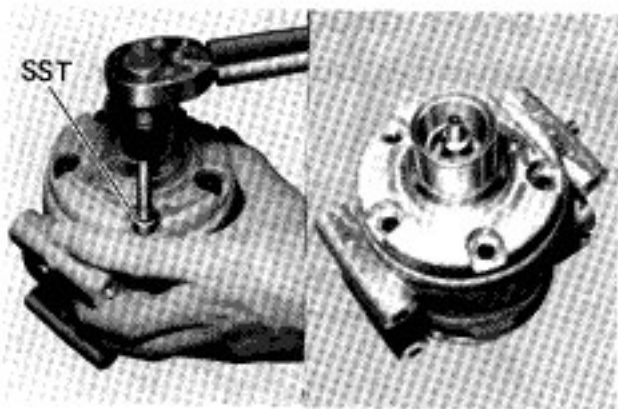

4. INSTALL FRONT HOUSING ON FRONT CYLINDER AND TIGHTEN SIX THROUGH BOLTS

Using SST and a torque wrench, gradually tighten the six through bolts in two or three passes.


SST 07110-61050


Torque: 260 kg-cm (19 ft-lb, 25 N-m)

5. INSTALL SHAFT SEAL

- (a) Fit the shaft seal to SST.

SST 07114-15010

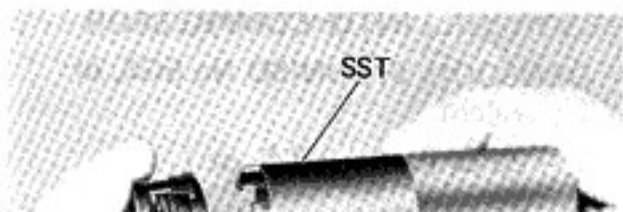


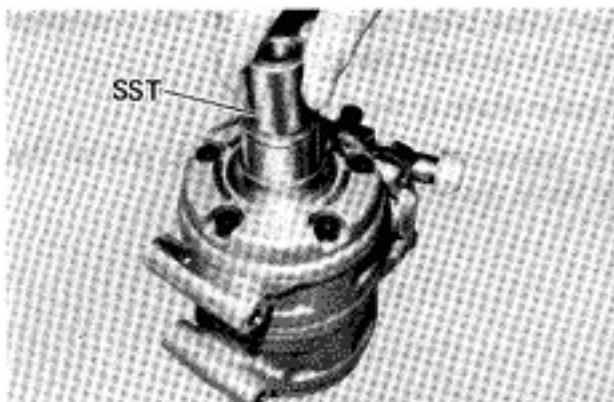

(b) Apply oil to the bore.


Insert SST, and turn it to the left while lightly pressing in. Then pull up SST.

SST 07114-15010

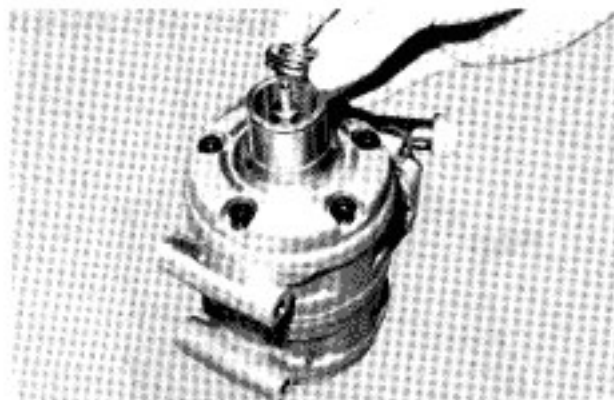


6. INSTALL SHAFT PLATE

(a) Put on the shaft plate.

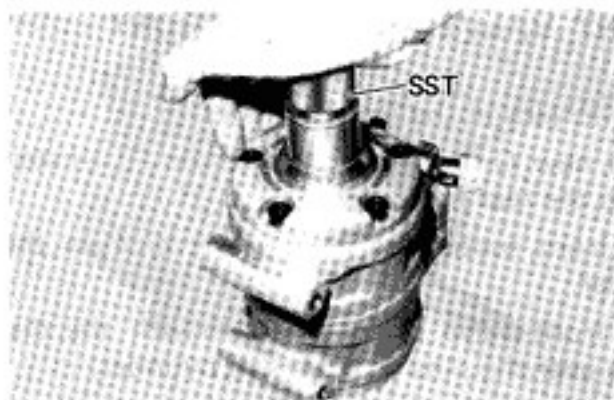

(b) Press in SST.

SST 07112-25010

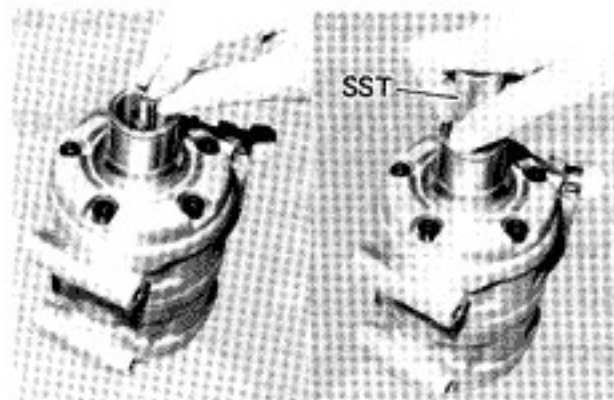

7. INSTALL KEY IN SHAFT GROOVE

Using SST and a plastic hammer, tap the key lightly.

SST 07114-45010


Put the felt inside the bore.



8. POUR COMPRESSOR OIL INTO COMPRESSOR

Compressor oil: DENSO OIL 6, SUNISO No.5GS, or equivalent

Refill capacity: 10 — 20 cc (0.3 — 0.7 fl. oz.)

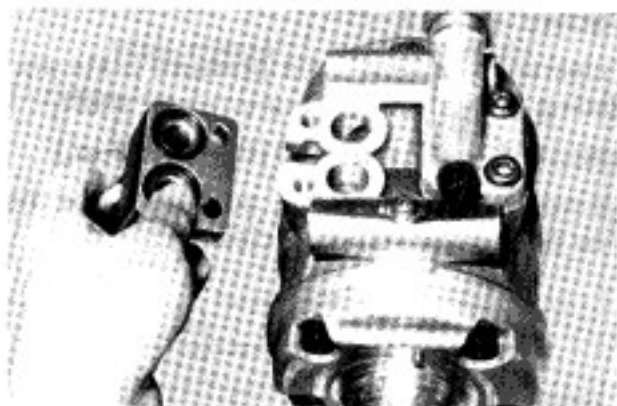


9. INSTALL SERVICE VALVES

- (a) Lubricate new O-rings with compressor oil. Install the O-rings in the service valves.
- (b) Install the service valves on the compressor. Using SST and a torque wrench, tighten the bolts.


SST 07110-61050

Torque: 260 kg-cm (19 ft-lb, 25 N·m)

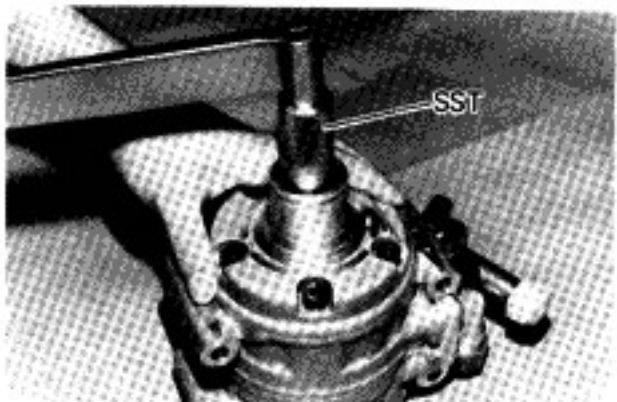

10. CHECK SHAFT STARTING TORQUE

Torque: 30 kg-cm (26 in.-lb, 2.9 N·m) or less

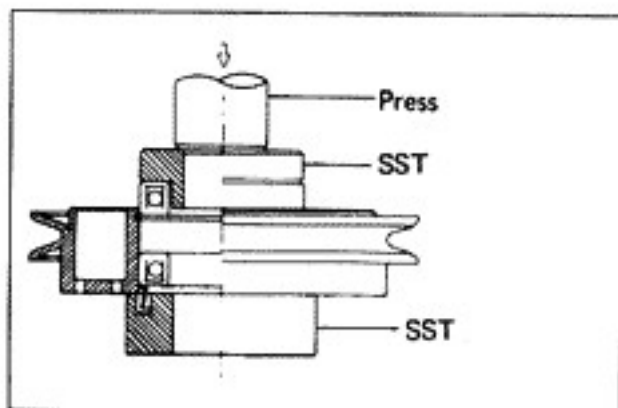

ASSEMBLY OF MAGNETIC CLUTCH


(See page AC-24)

1. INSTALL TWO BEARINGS IN ROTOR

- (a) Using SST, press a shield ring and two new bearings into the rotor boss until fully seated.

SST 07110-77011

- (b) Install the bearing snap ring into the rotor groove.

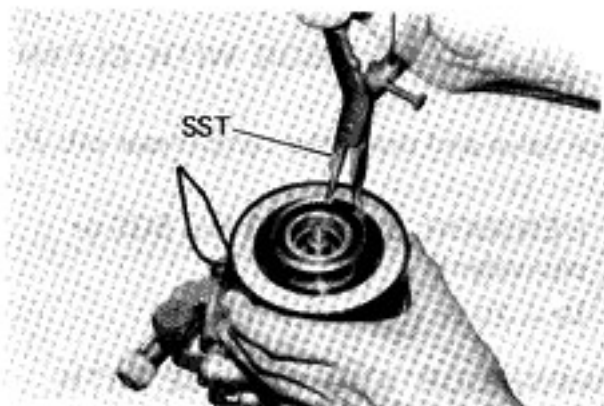

2. INSTALL STATOR

- (a) Install the stator on the compressor.
- (b) Using SST, install the snap ring.

SST 07114-84020

- (c) Connect the stator lead wires to the compressor housing.

3. INSTALL ROTOR

- (a) Install the rotor on the compressor shaft.
- (b) Using SST, install the snap ring.

SST 07114-84020






4. INSTALL PRESSURE PLATE

- (a) Adjust the clearance between the pressure plate and rotor by placing shims on the compressor shaft.


Standard clearance: 0.4 – 0.7 mm (0.016 – 0.028 in.)

If the clearance is not within tolerance, add or reduce the number of shims to obtain the standard clearance.

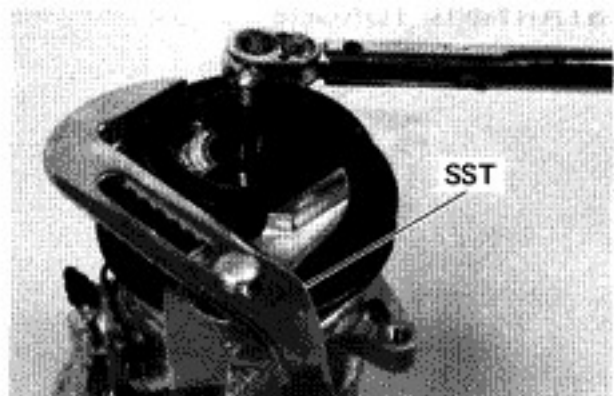

- (b) Using SST and a torque wrench, install the shaft nut.
SST 07110-77011

Torque: 165 kg-cm (12 ft-lb, 16 N-m)

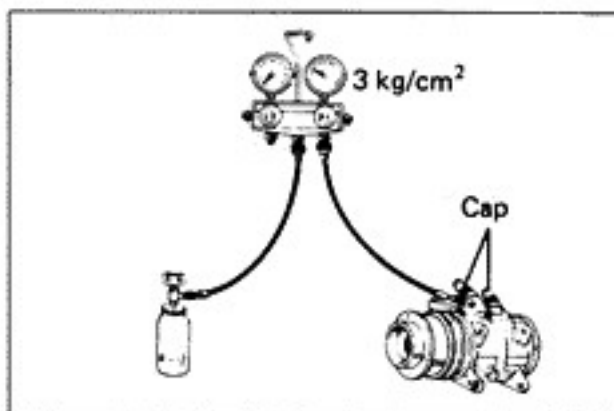

PERFORMANCE TEST OF COMPRESSOR

1. PERFORM GAS LEAKAGE TEST

- (a) Put caps on both service valves.
(b) Charge the compressor with refrigerant through the charging valve until the pressure is 3 kg/cm² (43 psi, 294 kPa).
(c) Using a gas leak detector, check the compressor for leaks.

If leaks are found, check and replace the gasket, O-ring, or shaft seal.

2. IF NECESSARY FILL COMPRESSOR WITH CLEAN COMPRESSOR OIL

Remove the service valve and drain the compressor oil. Fill with new oil.


Compressor oil: **DENSO OIL 6, SUNISO No. 5GS or equivalent**

Refill capacity: 10 – 20 cc (0.3 – 0.7 fl. oz.)

3. EVACUATE COMPRESSOR AND CHARGE WITH REFRIGERANT (See page AC-12)

Make sure the caps are tight and free from moisture and contamination.

NOTE: When storing a compressor for an extended period, charge it with refrigerant or dry nitrogen gas to prevent corrosion.

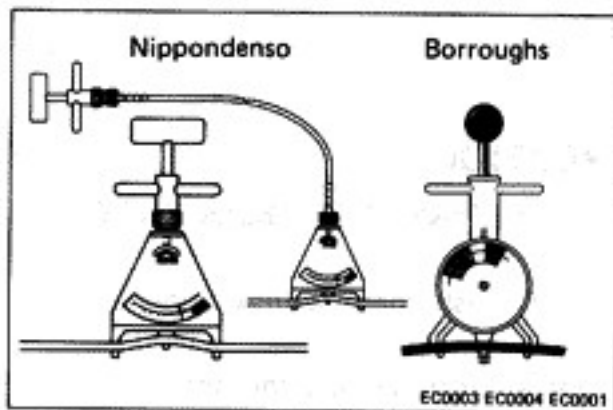

INSTALLATION OF COMPRESSOR

(See page AC-24)

1. INSTALL COMPRESSOR WITH MOUNTING BOLTS

Torque: 280 kg-cm (20 ft-lb, 27 N·m)

2. INSTALL DRIVE BELT

- Install the drive belt to the pulley.
- Adjust the belt with the adjusting bolts.
- Using a belt tension gauge, check the drive belt tension.

Belt tension gauge:

Nippondenso BTG-20 (95506-00020) or

Borroughs No. BT-33-73F

Drive belt tension

New belt 125 ± 25 lb

Used belt 80 ± 20 lb

NOTE:

- "New belt" refers to a belt which has been used less than 5 minutes on a running engine.
- "Used belt" refers to a belt which has been used on a running engine for 5 minutes or more.

3. CONNECT TWO FLEXIBLE HOSES TO COMPRESSOR SERVICE VALVES

Torque: Discharge line 225 kg-cm
(16 ft-lb, 22 N·m)

Suction line 325 kg-cm
(24 ft-lb, 32 N·m)

4. CONNECT CLUTCH LEAD WIRE TO WIRING HARNESS

5. CONNECT NEGATIVE CABLE TO BATTERY

6. EVACUATE AND CHARGE REFRIGERATION SYSTEM (See page AC-12)

CONDENSER

(See page AC-22)


ON-VEHICLE INSPECTION

1. CHECK CONDENSER FINS FOR BLOCKAGE OR DAMAGE

If the fins are clogged, wash them with a water and dry with compressed air.

CAUTION: Be careful not to damage the fins.

If the fins are bent, straighten them with screwdriver or pliers.

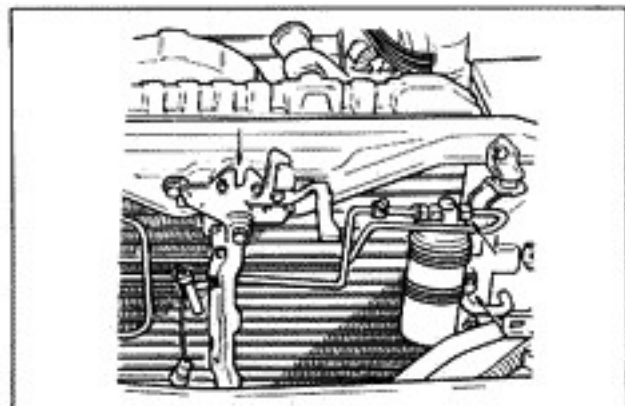

2. CHECK CONDENSER FITTINGS FOR LEAKAGE

Repair as necessary.

REMOVAL OF CONDENSER

1. DISCHARGE REFRIGERATION SYSTEM
(See page AC-12)
2. REMOVE FRONT GRILLE AND HOOD LOCK BRACE
3. DISCONNECT DISCHARGE FLEXIBLE HOSE FROM CONDENSER INLET FITTING
4. DISCONNECT LIQUID LINE TUBE FROM CONDENSER OUTLET FITTING

NOTE: Cap the open fittings immediately to keep moisture out of the system.

5. REMOVE CONDENSER

Remove the four bolts.

INSTALLATION OF CONDENSER

1. INSTALL CONDENSER
Install the four bolts making sure the rubber cushions fit on the mounting flanges correctly.
2. CONNECT LIQUID LINE TUBE AND DISCHARGE FLEXIBLE HOSE TO CONDENSER

Torque:

| | |
|-------------------------|---------------------------------|
| Liquid line tube | 135 kg-cm (10 ft-lb, 13 N·m) |
| Discharge flexible hose | 225 kg-cm (16 ft-lb, 22 N·m) |

3. INSTALL FRONT GRILLE AND HOOD LOCK BRACE
4. IF CONDENSER IS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR

RECEIVER

(See page AC-22)

ON-VEHICLE INSPECTION

CHECK SIGHT GLASS, FUSIBLE PLUG AND FITTINGS FOR LEAKAGE

Use a gas leak tester. Repair as necessary.

REMOVAL OF RECEIVER

1. DISCHARGE REFRIGERATION SYSTEM
(See page AC-12)

2. DISCONNECT TWO LIQUID LINE TUBES FROM RECEIVER

NOTE: Cap the open fittings immediately to keep moisture out of the system.

3. REMOVE RECEIVER FROM RECEIVER HOLDER

INSTALLATION OF RECEIVER

1. INSTALL RECEIVER IN RECEIVER HOLDER

NOTE: Do not remove blind plugs until ready for connection.

2. CONNECT TWO LIQUID LINE TUBES TO RECEIVER
Torque: 135 kg-cm (10 ft-lb, 13 N·m)

3. IF RECEIVER IS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR
Add 10 — 20 cc (0.3 — 0.7 fl. oz.)

4. EVACUATE, CHARGE AND TEST REFRIGERATION SYSTEM (See page AC-12)

COOLING UNIT


(See page AC-22)





ON-VEHICLE INSPECTION OF EXPANSION VALVE

1. CONNECT MANIFOLD GAUGE TO COMPRESSOR
2. CHECK EXPANSION VALVE OPERATION

- (a) Run the engine at fast idle with the air conditioning on.
- (b) Check that reading on the low pressure is between 0.5 — 5.0 kg/cm² (7 — 71 psi, 49 — 490 kPa).

If the reading is too low, check and replace the expansion valve and/or receiver.

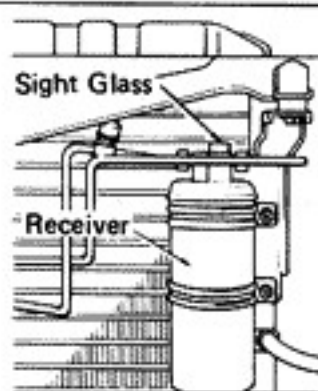

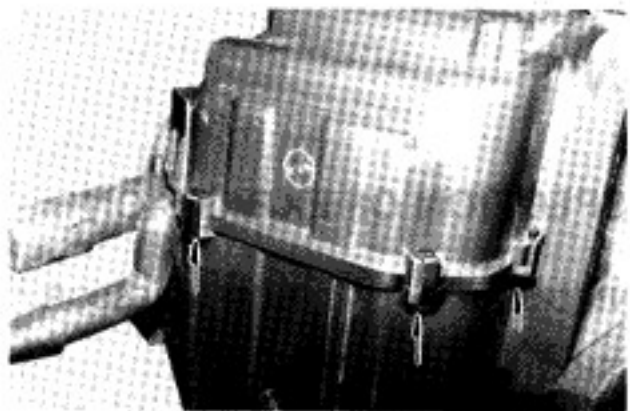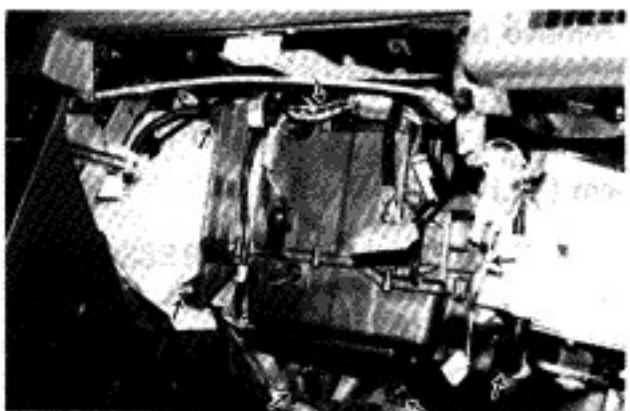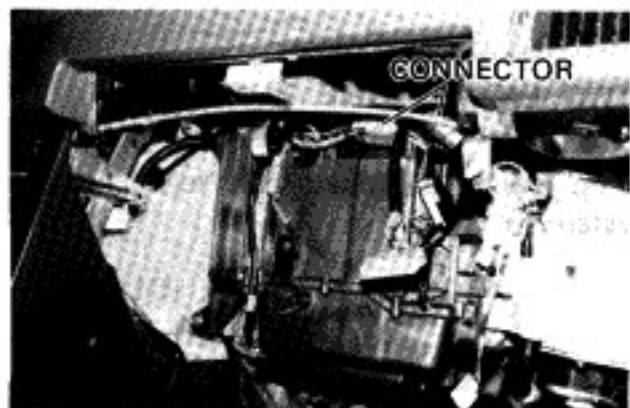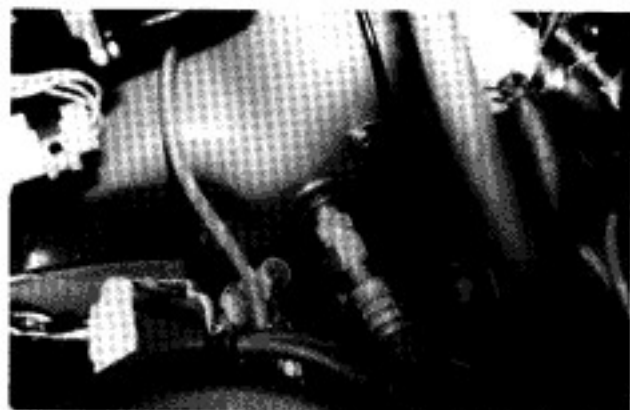

REMOVAL OF COOLING UNIT


1. DISCONNECT NEGATIVE CABLE FROM BATTERY
2. DISCHARGE REFRIGERATION SYSTEM
(See page AC-12)
3. DISCONNECT SUCTION FLEXIBLE HOSE FROM COOLING UNIT OUTLET FITTING
4. DISCONNECT LIQUID LINE TUBE FROM COOLING UNIT INLET FITTING

NOTE: Cap the open fittings immediately to keep moisture out of the system.

5. REMOVE GROMMETS FROM INLET AND OUTLET FITTINGS
6. REMOVE FOLLOWING COMPONENTS:
 - (a) Glove box with undercover
 - (b) Side air duct
7. DISCONNECT CONNECTORS
8. REMOVE COOLING UNIT
Remove the three nuts and four bolts.
9. REMOVE A/C AMPLIFIER
10. REMOVE A/C WIRE HARNESS FROM COOLING UNIT

DISASSEMBLY OF COOLING UNIT

1. REMOVE LOWER CASE
Using a screwdriver, remove the four clamps, and four screws.
2. REMOVE UPPER CASE FROM EVAPORATOR
Remove the two screws.

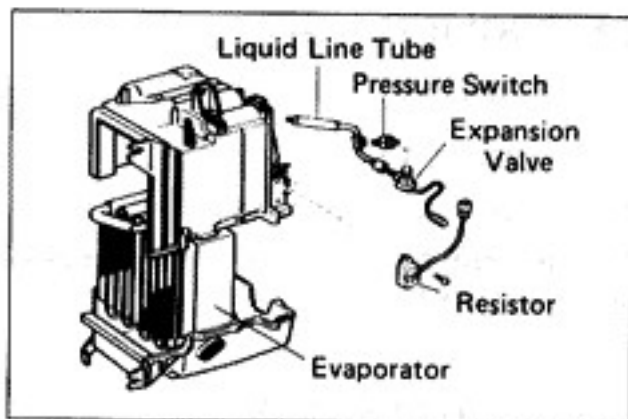

3. REMOVE COMPONENTS FROM EVAPORATOR

- Remove the heat insulator and the clamp from the outlet tube.
- Disconnect the liquid line tube from inlet fitting of the expansion valve.
- Disconnect the expansion valve from the inlet fitting of the evaporator.
- Remove the pressure switch, if required.

Evaporator

INSPECTION OF EVAPORATOR

1. CHECK EVAPORATOR FINS FOR BLOCKAGE

If the fins are clogged, clean them with compressed air.

CAUTION: Never use water to clean the evaporator.

2. CHECK FITTINGS FOR CRACKS OR SCRATCHES

Repair as necessary.



ASSEMBLY OF COOLING UNIT

1. INSTALL COMPONENTS ON EVAPORATOR

- Connect the expansion valve to the inlet fitting of the evaporator. Torque the nut.

Torque: 235 kg-cm (17 ft-lb, 23 N-m)

NOTE: Be sure that the O-ring is positioned on the tube fitting.



- Connect the liquid line tube to the inlet fitting of the expansion valve. Torque the nut.

Torque: 135 kg-cm (10 ft-lb, 13 N-m)

- Install the pressure switch, if removed.

Torque: 135 kg-cm (10 ft-lb, 13 N-m)

- Install the clamp and heat insulator to the outlet tube.

2. INSTALL UPPER AND LOWER CASES ON EVAPORATOR

3. INSTALL THERMISTOR



INSTALLATION OF COOLING UNIT

1. INSTALL A/C WIRE HARNESS TO COOLING UNIT
2. INSTALL COOLING UNIT

Install the cooling unit with the three nuts and four bolts.

CAUTION: Be careful not to pinch the wiring harness while installing the cooling unit.

3. INSTALL FOLLOWING COMPONENTS:

- (a) Side air duct
- (b) Glove box with undercover

4. INSTALL GROMMETS ON INLET AND OUTLET FITTINGS

5. CONNECT LIQUID LINE TUBE TO COOLING UNIT INLET FITTING

Torque: 135 kg-cm (10 ft-lb, 13 N-m)

6. CONNECT SUCTION FLEXIBLE HOSE TO COOLING UNIT OUTLET FITTING

Torque: 325 kg-cm (24 ft-lb, 32 N-m)

7. IF EVAPORATOR IS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR

Add 20 — 35 cc (0.7 — 1.2 fl. oz.)

8. CONNECT NEGATIVE CABLE TO BATTERY

9. EVACUATE, CHARGE AND TEST REFRIGERATION SYSTEM (See page AC-12)

REFRIGERANT LINES

(See page AC-22)

ON-VEHICLE INSPECTION

1. INSPECT HOSES AND TUBES FOR LEAKAGE

Use a gas leak tester. Replace, if necessary.

2. CHECK THAT HOSE AND TUBE CLAMPS ARE NOT LOOSE

Tighten or replace, as necessary.

REPLACEMENT OF REFRIGERANT LINES

1. DISCHARGE REFRIGERATION SYSTEM
(See page AC-12)



2. REPLACE FAULTY TUBE OR HOSE

NOTE: Cap the open fittings immediately to keep moisture out of the system.

Tightening torques for the O-ring fittings.

| Fitting size | Torque |
|----------------------------------|---------------------------------|
| 0.31 in. tube for liquid line | 135 kg-cm (10 ft-lb, 13 N-m) |
| 0.50 in. tube for discharge line | 225 kg-cm (16 ft-lb, 22 N-m) |
| 0.61 in. tube for suction line | 325 kg-cm (24 ft-lb, 32 N-m) |

3. EVACUATE, CHARGE AND TEST REFRIGERATION SYSTEM (See page AC-12)

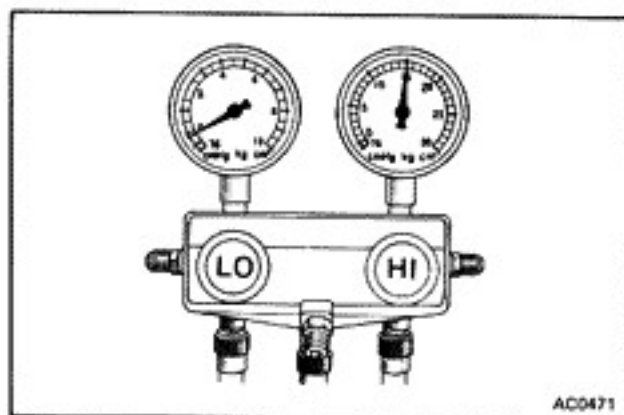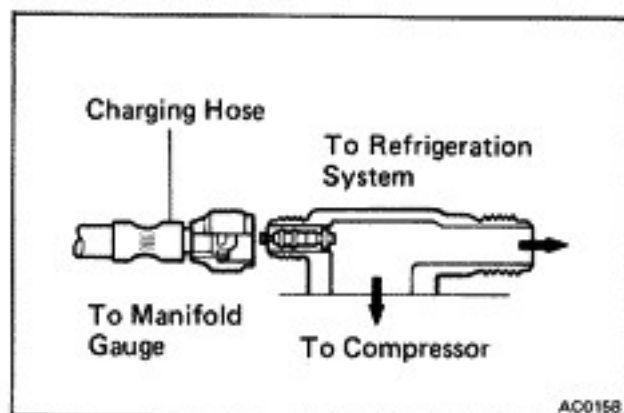





EXPANSION VALVE ON-VEHICLE INSPECTION

1. CHECK QUANTITY OF GAS DURING REFRIGERATION CYCLE
2. INSTALL MANIFOLD GAUGE SET
 - (a) Close the high pressure and low pressure valves.
 - (b) Connect the high pressure hose to the discharge service valve of the compressor.
 - (c) Connect the low pressure hose to the suction service valve of the compressor.
3. RUN ENGINE

Run the engine at 2,000 rpm for at least 5 minutes. Then check that the high pressure reading is 13 – 15 kg/cm² (185 – 213 psi, 1,275 – 1,471 kPa).
4. CHECK EXPANSION VALVE

If the expansion valve is faulty, the low pressure reading will drop to 0 kg/cm² (0 psi, 0 kPa), otherwise it is OK.

NOTE: When the low pressure drops to 0 kg/cm² (0 psi, 0 kPa), feel the receiver's IN and OUT sides for no temperature difference.

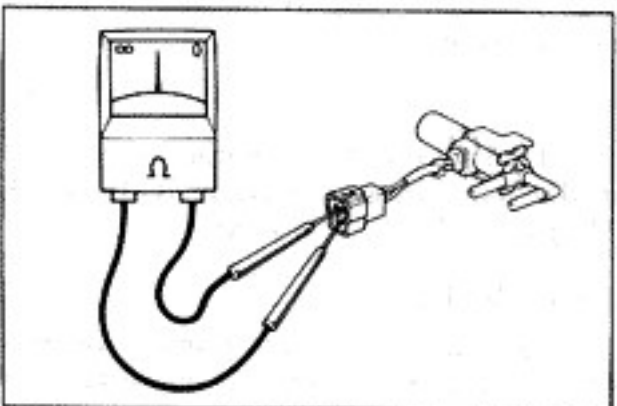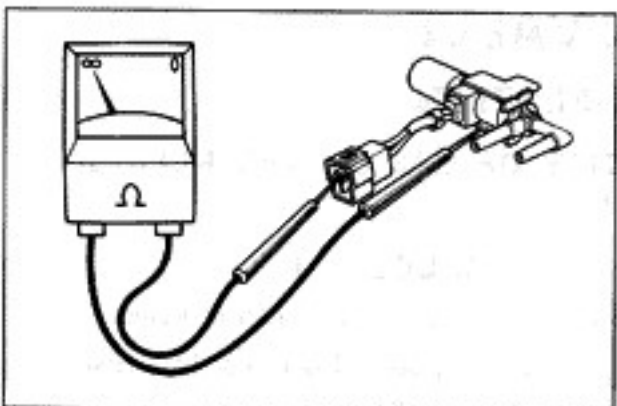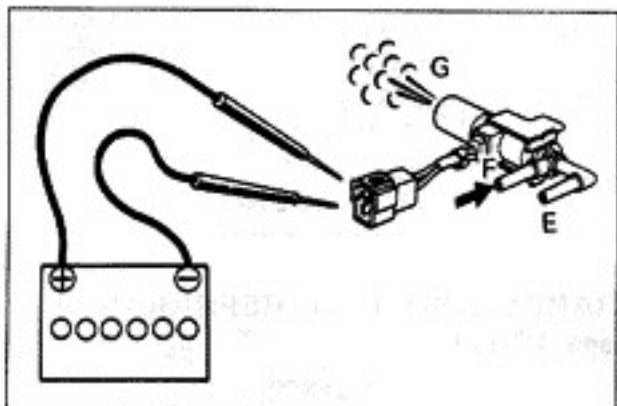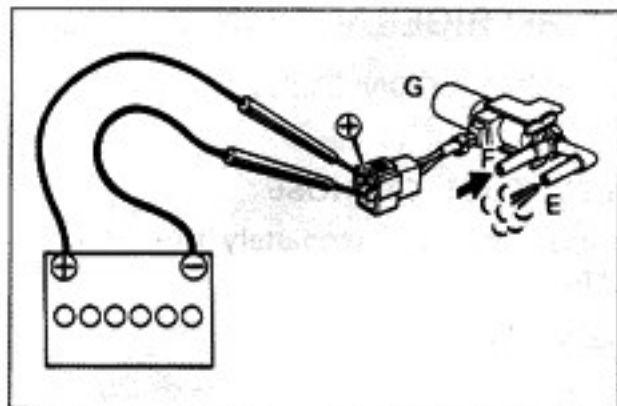

VACUUM SWITCHING VALVE (VSV)

(See page AC-22)

INSPECTION OF VSV

1. CHECK VACUUM CIRCUIT CONTINUITY IN VSV BY BLOWING AIR INTO PIPES

- Connect the VSV terminals to the battery terminals as illustrated.
- Blow into pipe "F" and check that air comes out of pipe "E".
- Disconnect the battery.
- Blow into pipe "F" and check that air comes out of the filter "G".

If a problem is found, repair or replace the VSV.

2. CHECK FOR SHORT CIRCUIT

Using an ohmmeter, check that there is no continuity between each terminal and the VSV body.

If there is continuity, replace the VSV.

3. CHECK FOR OPEN CIRCUIT

Using an ohmmeter, measure the resistance between the two terminals.

Resistance: 38 — 43 Ω (cold)

If resistance is not within specification, replace the VSV.