


# Front Disc Rotor

BRAKE

## 4. Front Disc Rotor

### A: REMOVAL


- 1) Lift up the vehicle, and then remove the front wheels.
- 2) Remove the caliper body assembly from the housing assembly - front axle.
  - (1) Remove the bolt from the brake hose bracket.
  - (2) Remove the mounting bolt, and remove the caliper body assembly.
  - (3) Prepare wiring harnesses etc. to be discarded, and suspend the caliper body assembly from the strut assembly.

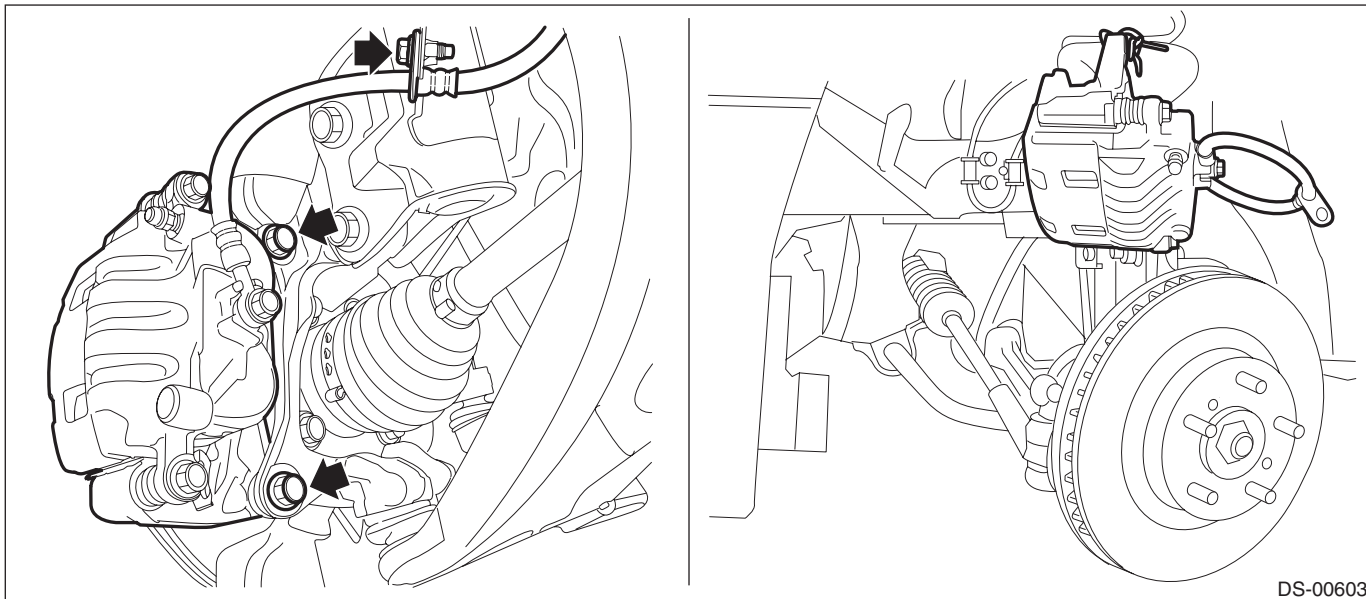

- 3) Remove the front disc rotor.

#### NOTE:

When the disc rotor is difficult to be removed from the hub unit COMPL - front axle, screw in 8 mm (0.31 in) bolt to the threaded part of the disc rotor (A), and remove the disc rotor.

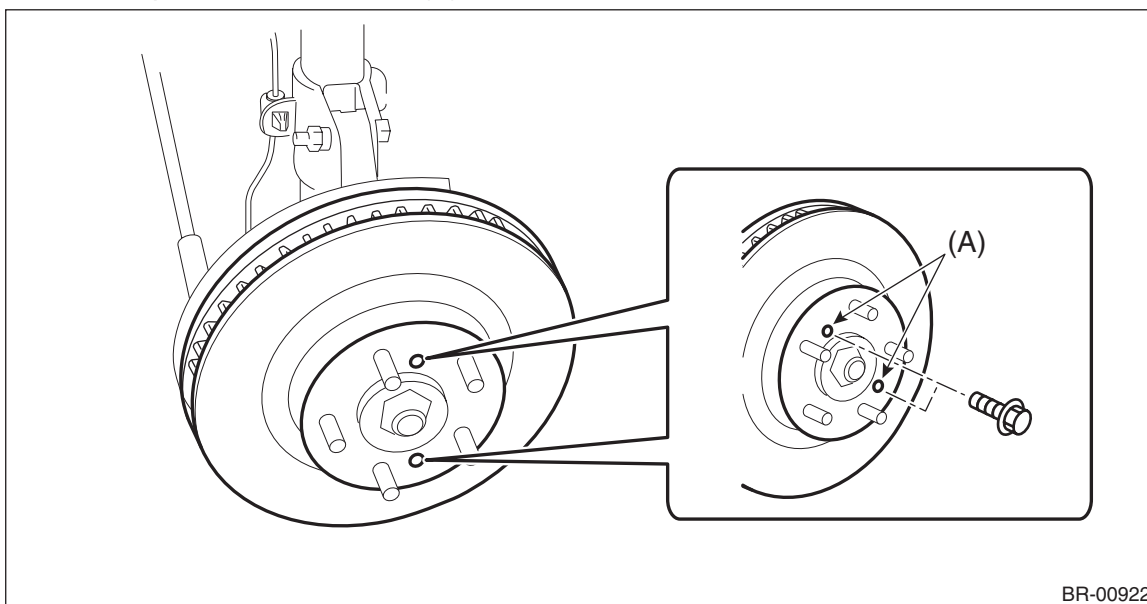

## B: INSTALLATION

### NOTE:

Before installation, remove mud and foreign matter from the caliper body assembly.

- 1) Before installation, check the front disc rotor. <Ref. to BR-21, INSPECTION, Front Disc Rotor.>
- 2) Install each part in the reverse order of removal.

### Tightening torque:

**Brake hose bracket: 33 N·m (3.36 kgf-m, 24.3 ft-lb)**

**Mounting bolt: 80 N·m (8.16 kgf-m, 59.0 ft-lb)**

**Front wheel: Except for C4 model**

**120 N·m (12.24 kgf-m, 88.5 ft-lb)**

**Front wheel: C4 model**


**100 N·m (10.20 kgf-m, 73.8 ft-lb)**

## C: INSPECTION

### 1. DISC ROTOR RUNOUT CHECK

- 1) Check the hub unit COMPL - front axle for free play and runout before the inspection of disc rotor runout limit. <Ref. to DS-33, INSPECTION, Front Hub Unit Bearing.>
- 2) Tighten the wheel nuts to secure disc rotor.
- 3) Set a dial gauge 10 mm (0.39 in) inward from the disc rotor outer circumference, and check the disc rotor runout while rotating the disc rotor.

**Disc rotor runout limit: 0.05 mm (0.0020 in)**

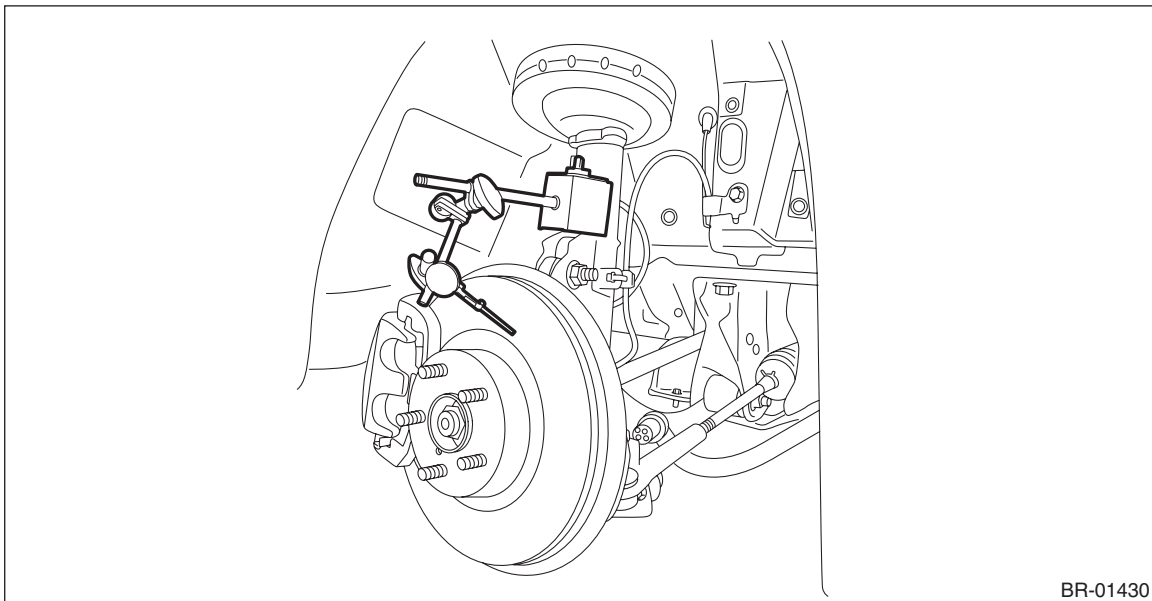


- 4) If the disc rotor runout exceeds service limit, resurface the disc rotor.
- 5) Check the disc rotor thickness after resurfacing. <Ref. to BR-22, DISC ROTOR THICKNESS CHECK, INSPECTION, Front Disc Rotor.>

# Front Disc Rotor

## BRAKE

### 2. DISC ROTOR THICKNESS CHECK

1) Set a micrometer 10 mm (0.39 in) inward from the disc rotor outer perimeter, and then measure the disc rotor thickness (A).

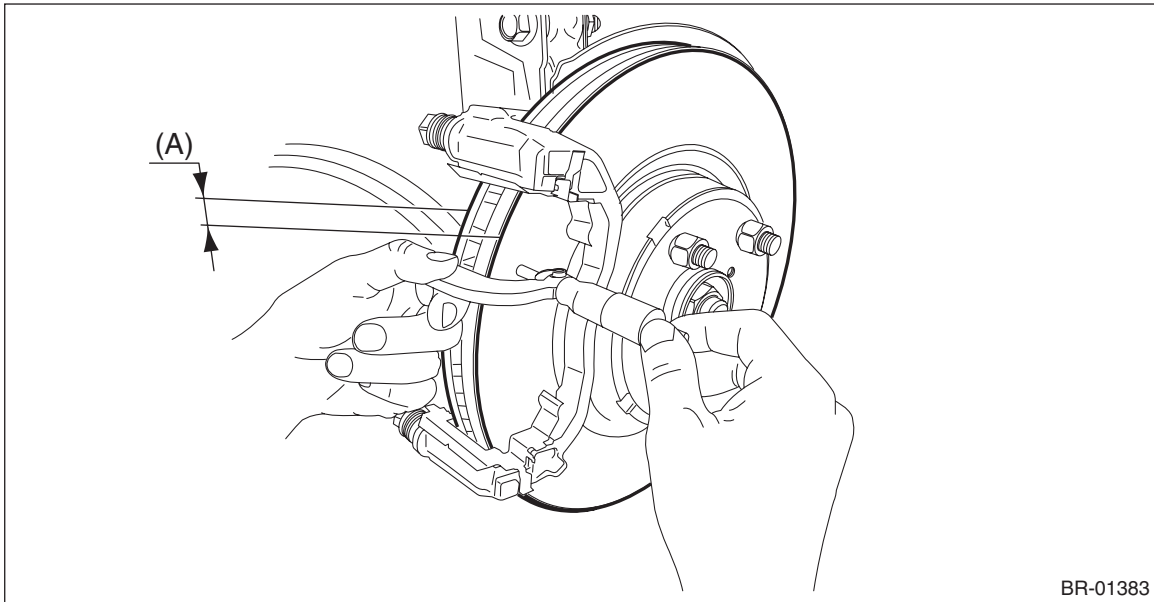

	Size	Standard	Wear limit	Disc rotor outer diameter
Disc rotor thickness (A)	15-inch	24 mm (0.94 in)	22 mm (0.87 in)	277 mm (10.91 in)
	16-inch			294 mm (11.57 in)

2) If the wear limit is exceeded in the inspection, replace the disc rotor.